 


## PRODUCT CODE : HANGING TV UNIT 2.1

**We're here to help - Do not return this product !**

**Call, email or find us online first !**

- If you need help with assembly
- If you received a damaged or defective part
- If you are missing hardware

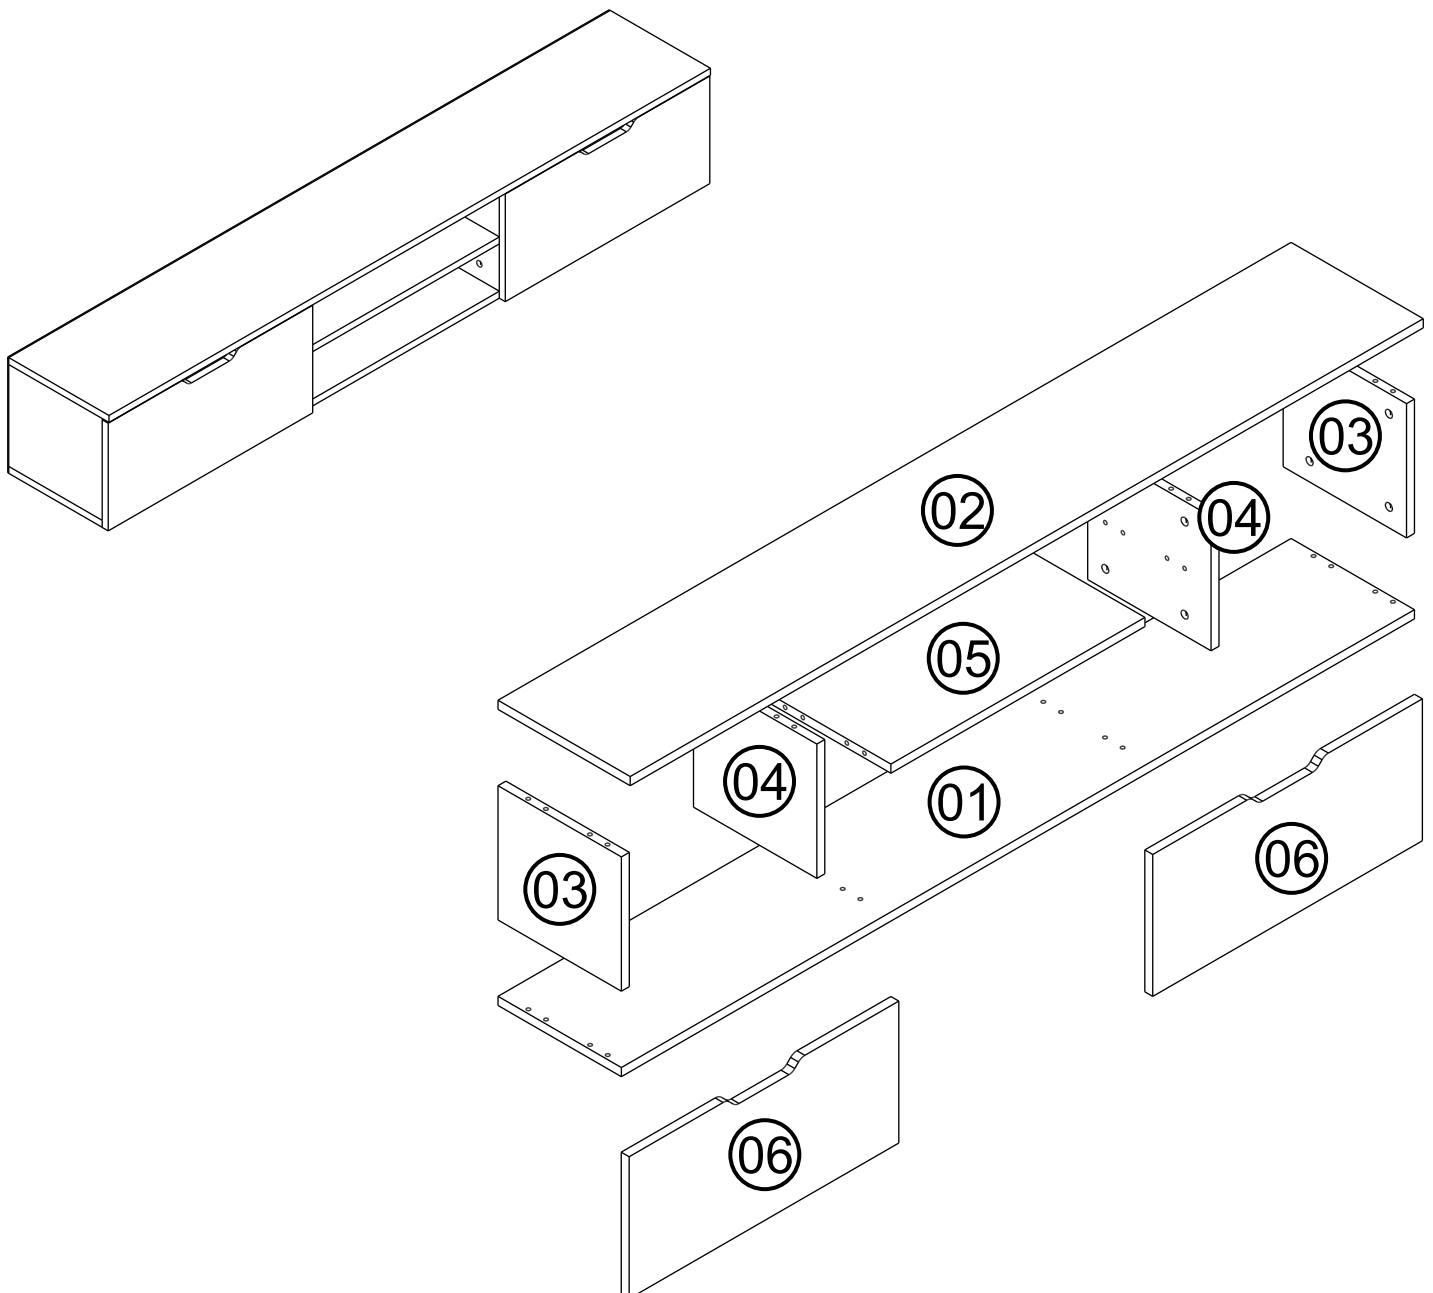

Read these assembly instructions carefully before beginning. Verify that you have in hands all the wood parts and hardware. Keep this document for future reference.



Two people are required to assemble and move this unit.



**Safety First !** Do not allow children to climb on or play with furniture.

 
www.Jowis  
Windows'us



Never leave liquids or damp clothes on your furniture. Never use chemical product to clean your furniture. Do not place your furniture in direct sunlight.


 

 
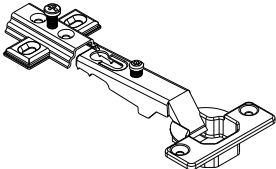 

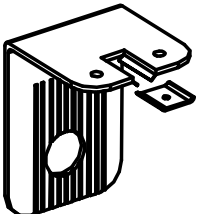 
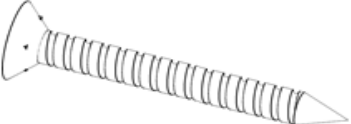 
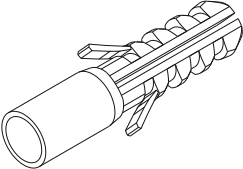 
To clean your furniture, dampen a soft cloth with a mild solution of dishwashing liquid. Squeeze excess water. Clean unit and wipe it dry.


## Tools required

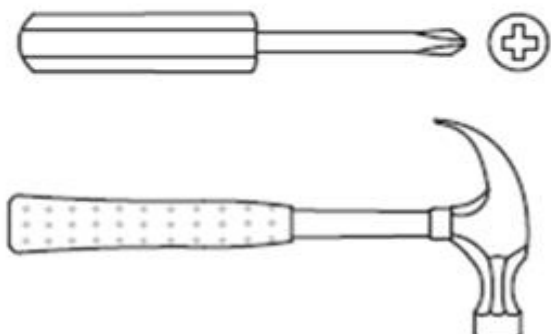




**For step 8**

Hardware List





 
<div>20x</div> <div>A</div> <div></div>	<div>20x</div> <div>B</div> <div></div>	<div>20x</div> <div>C</div> <div></div>
	<div>24x</div> <div>E</div> <div></div>	
<div>4x</div> <div>G</div> <div></div>		
<div>20x</div> <div>K</div> <div></div>	<div>4x</div> <div>L</div> <div></div>	<div>4x</div> <div>M</div> <div></div>
<div>4x</div> <div>N</div> <div></div>		

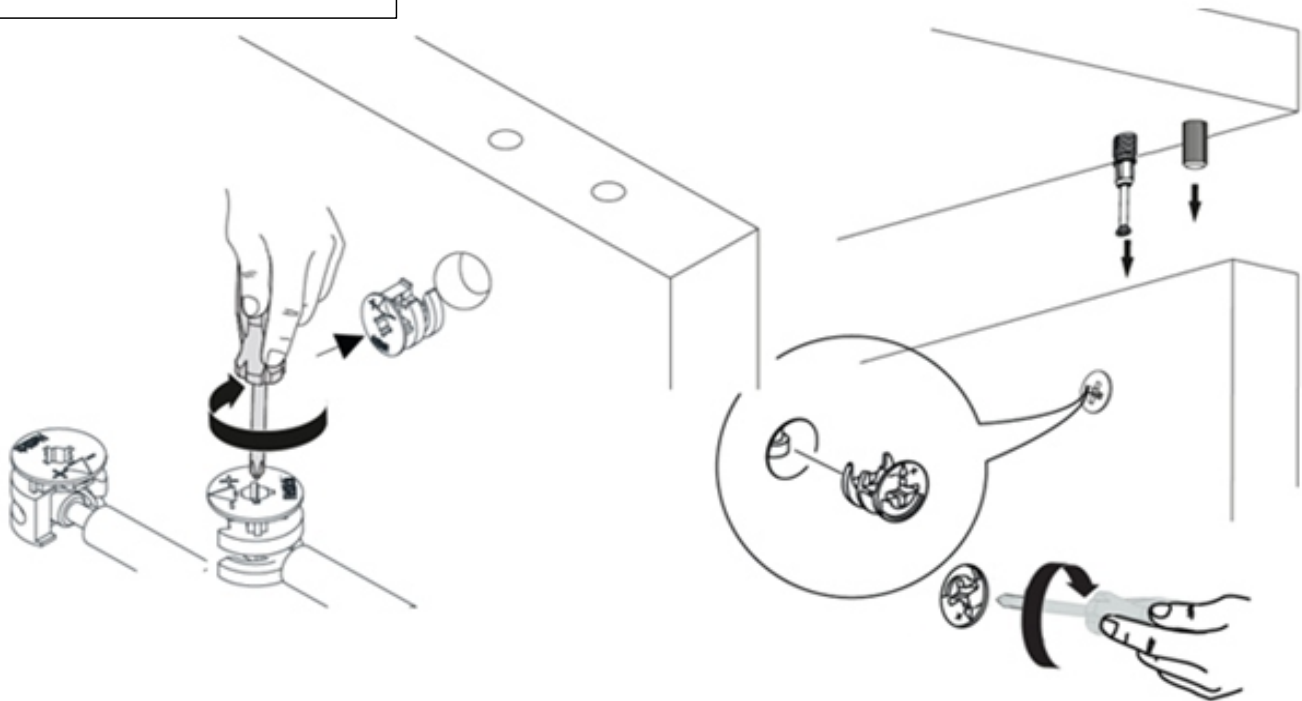


# 1 Install the 16 push bolts and 16 dowels into the panels 1 and 2.

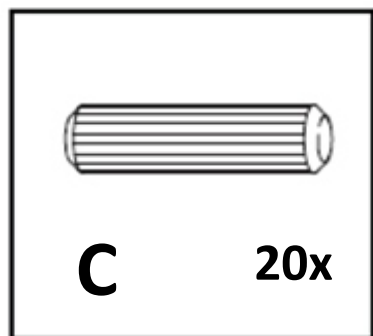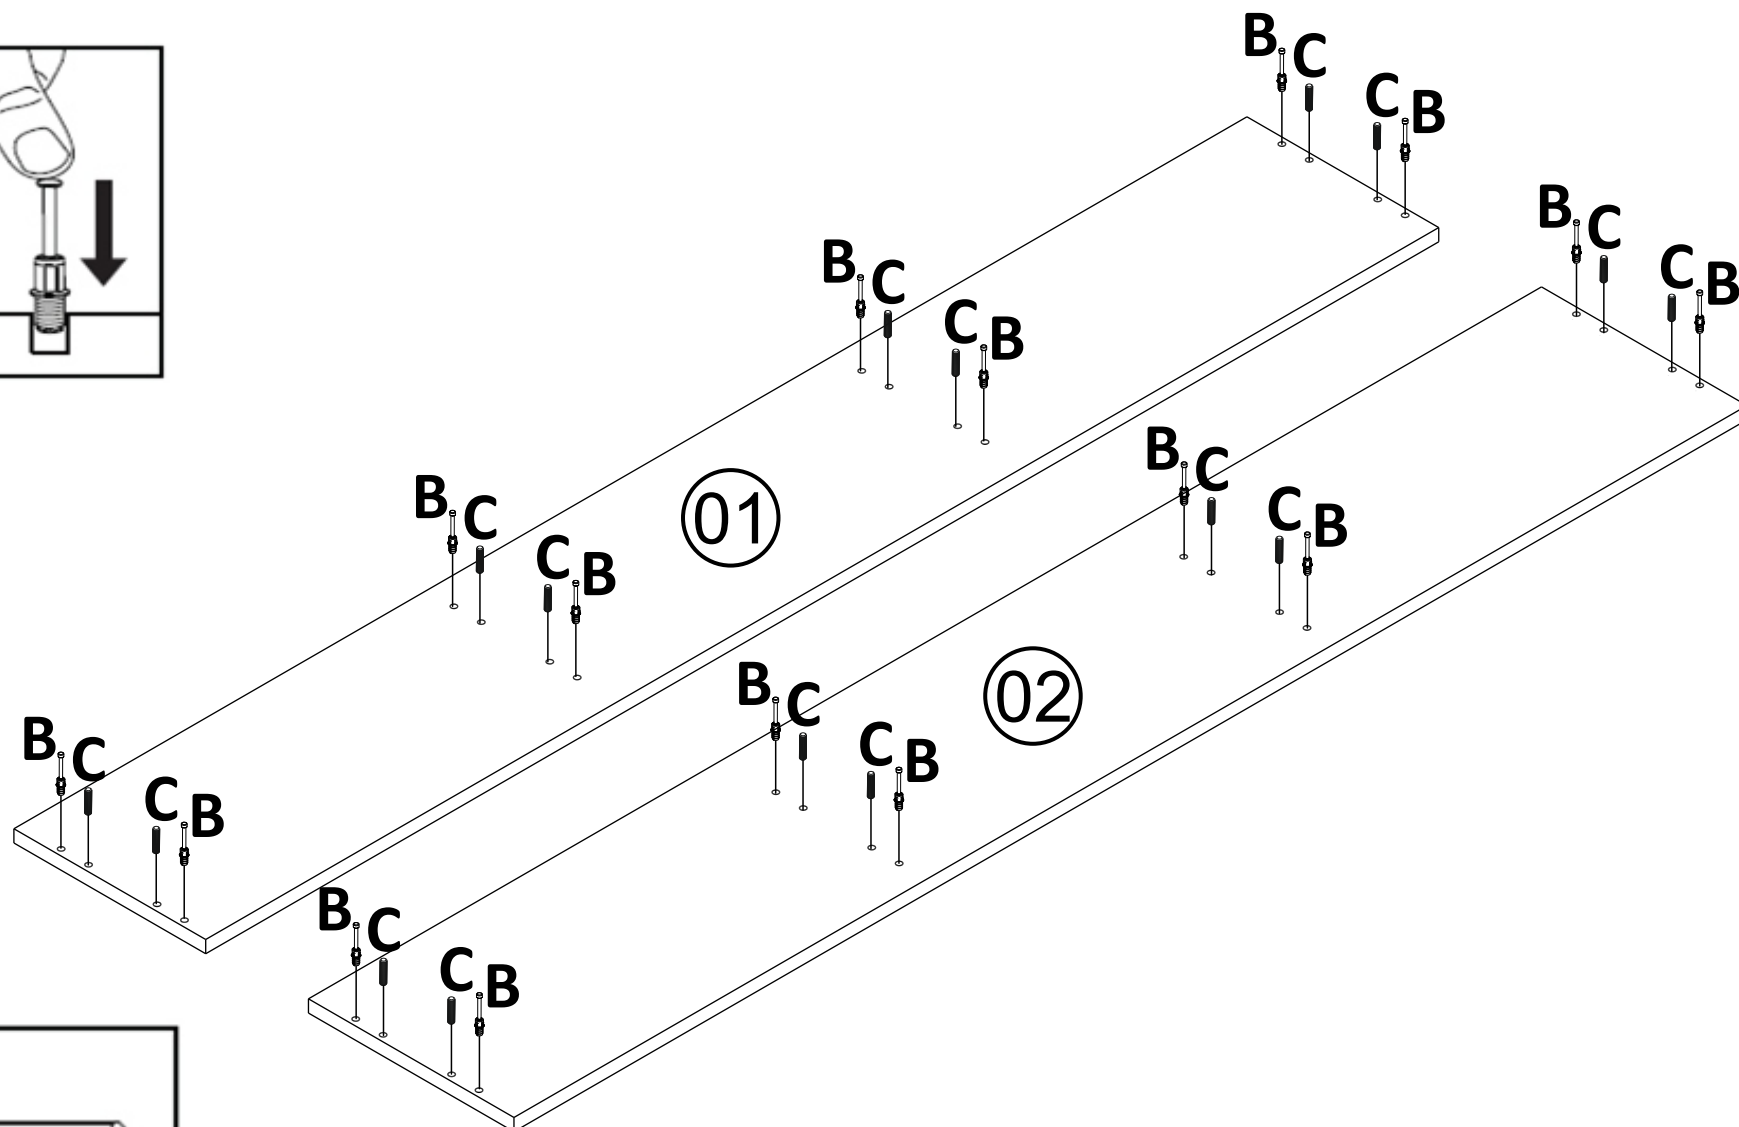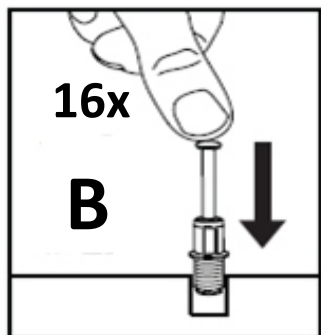   

   
 
 
**2** Install the 4 push bolts and 4 dowels into the panels 4.  
Insert the 20 cam locks into the panels 3,4 and 5.

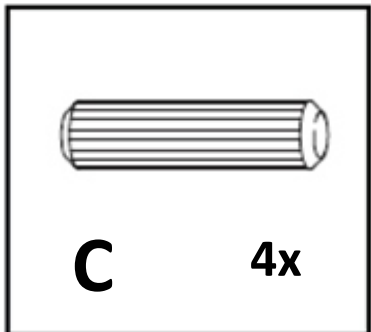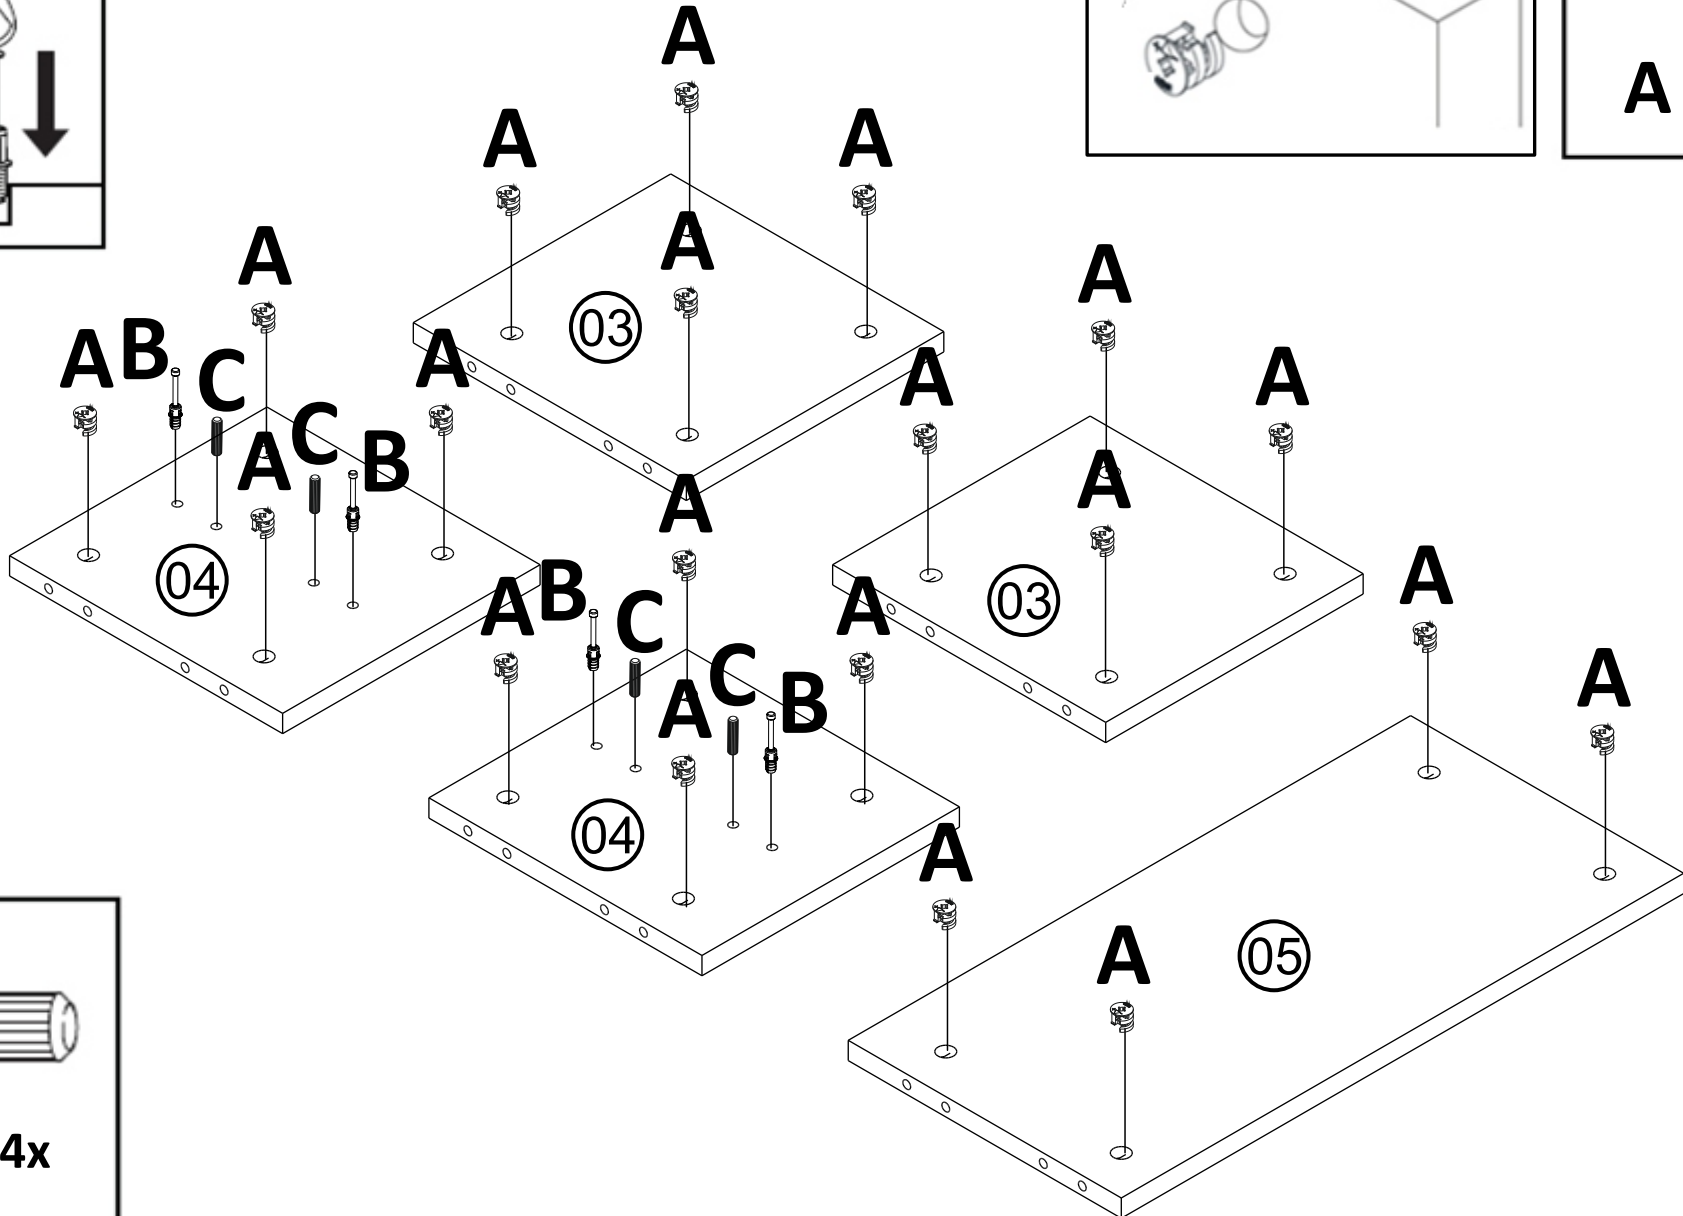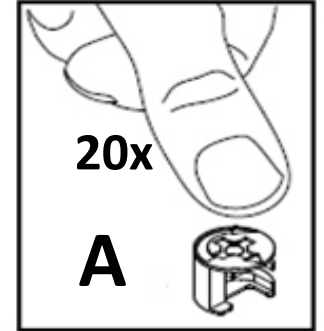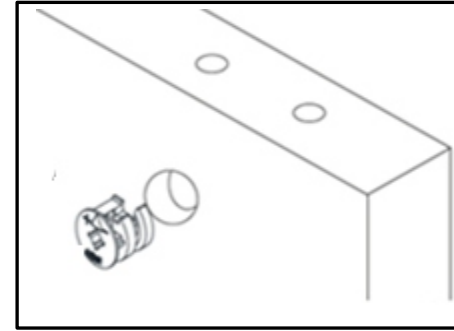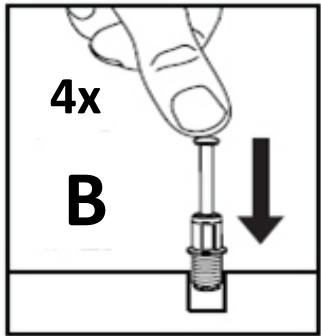


### 3 Fasten the 4 hinges to a pair of 2 doors 6.

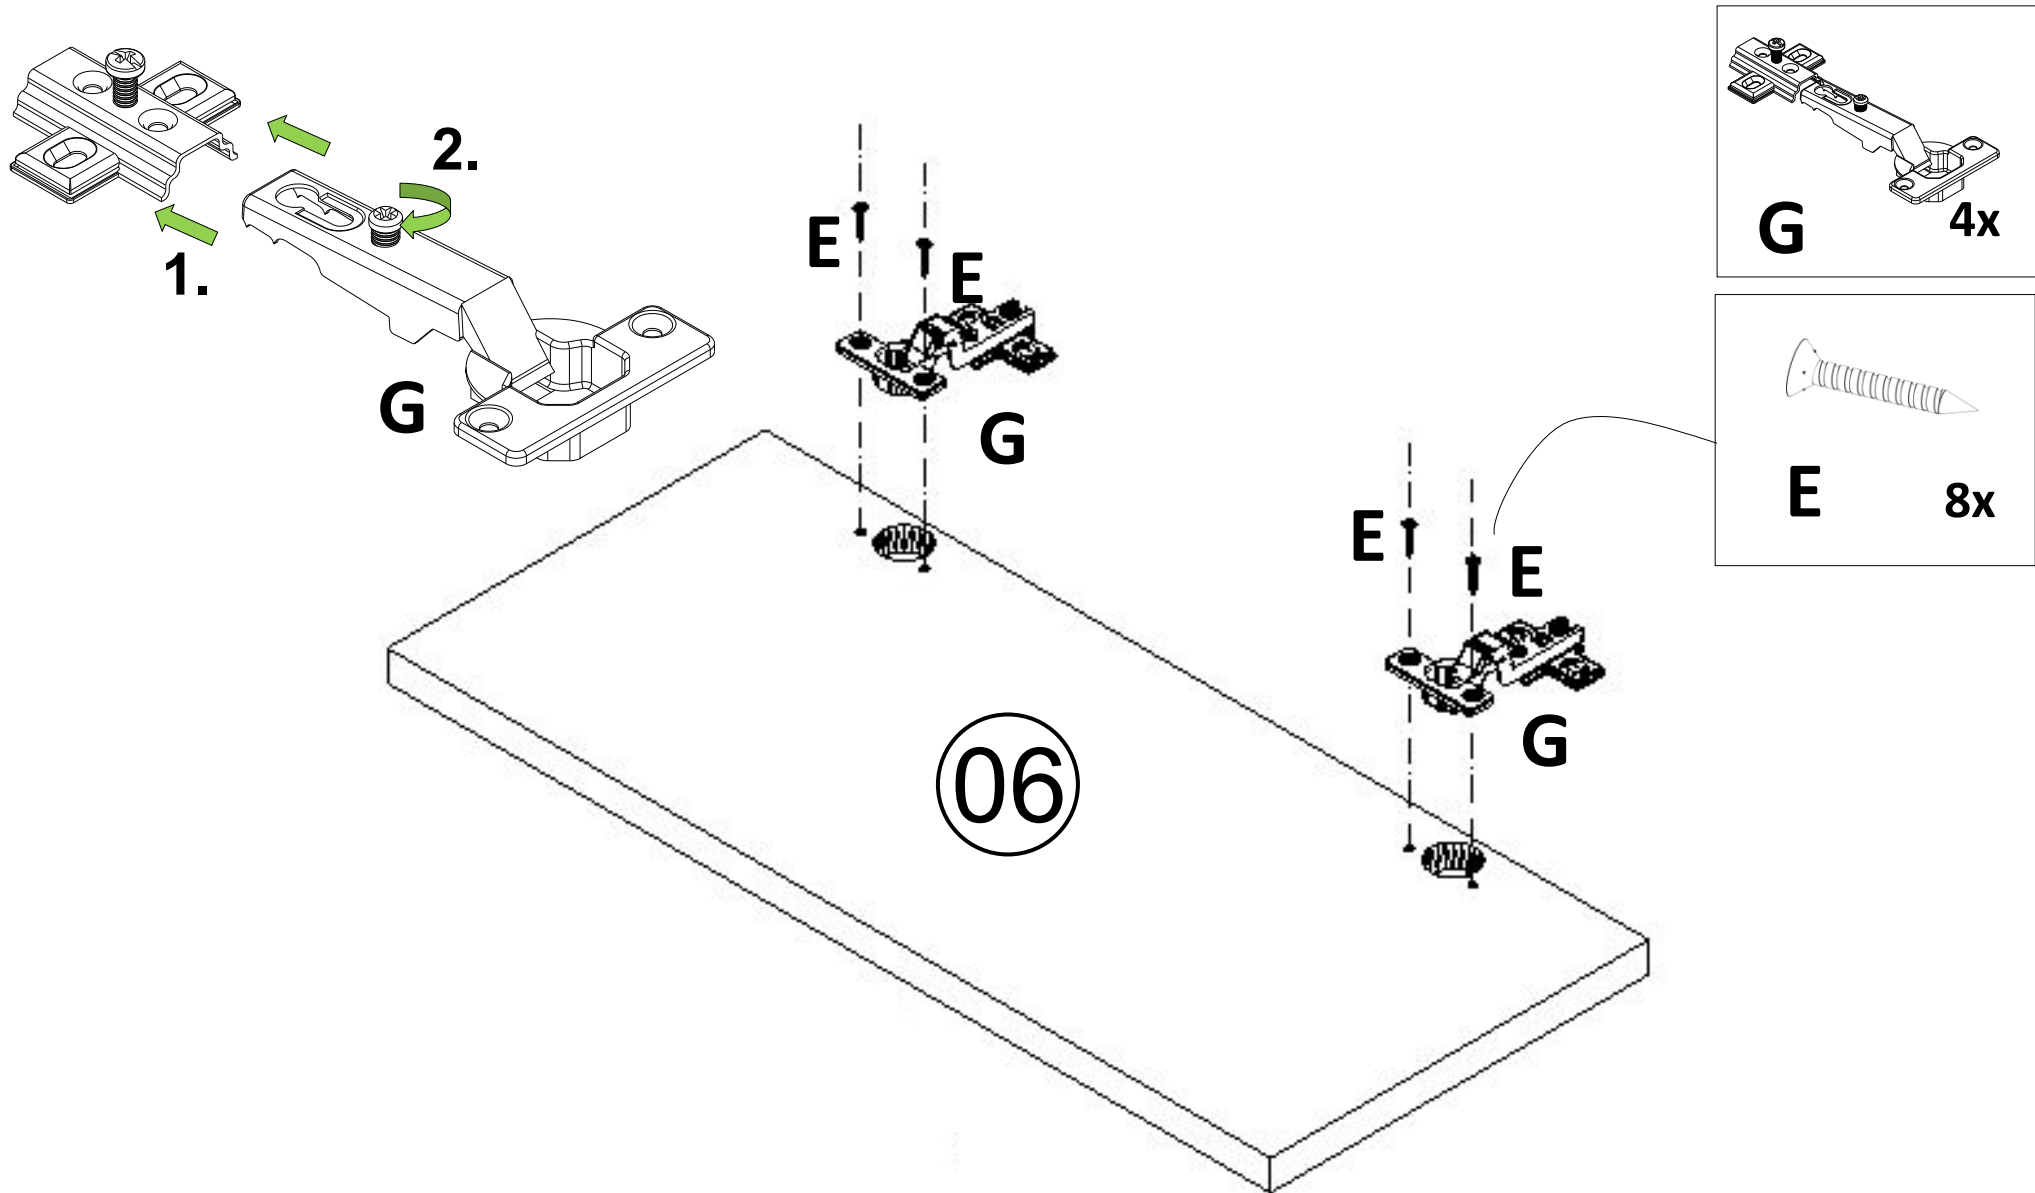 




# 4 Fasten the panel 4 to the panels 5. Then tighter the 4 cam locks.

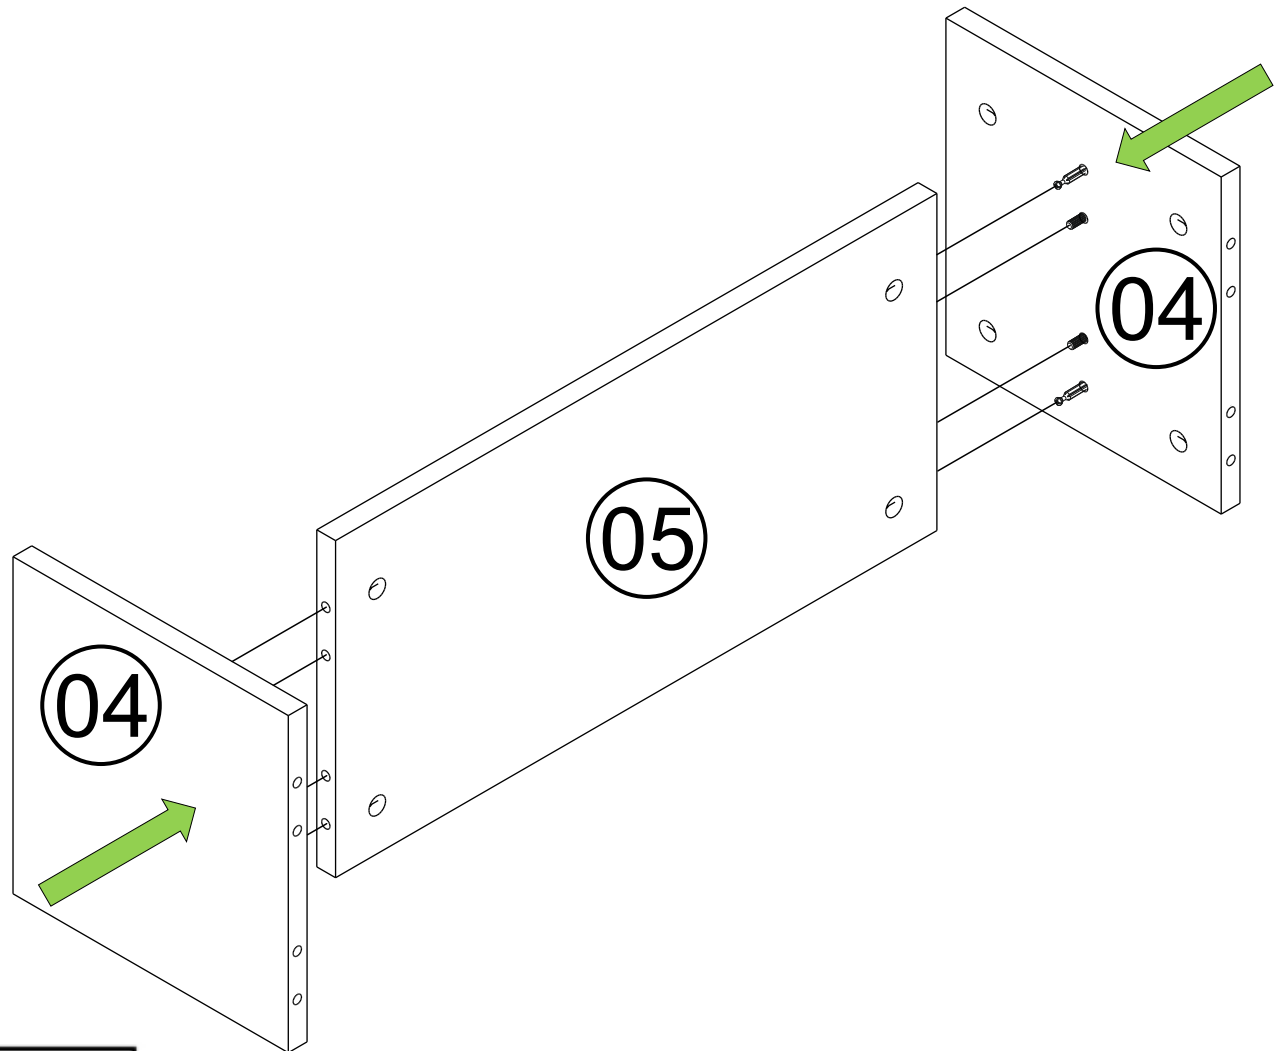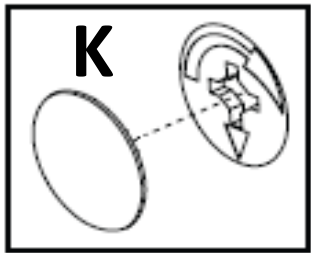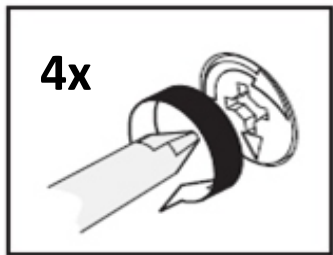   

IMPORTANT

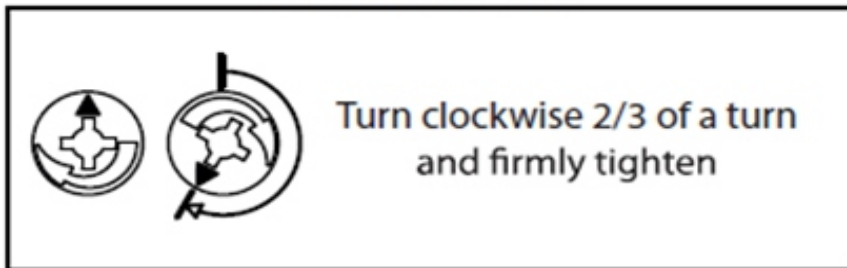 

# 5 Fasten the panel 1 and 2 to the panels 3 and 4. Then tighter the 16 cam locks.

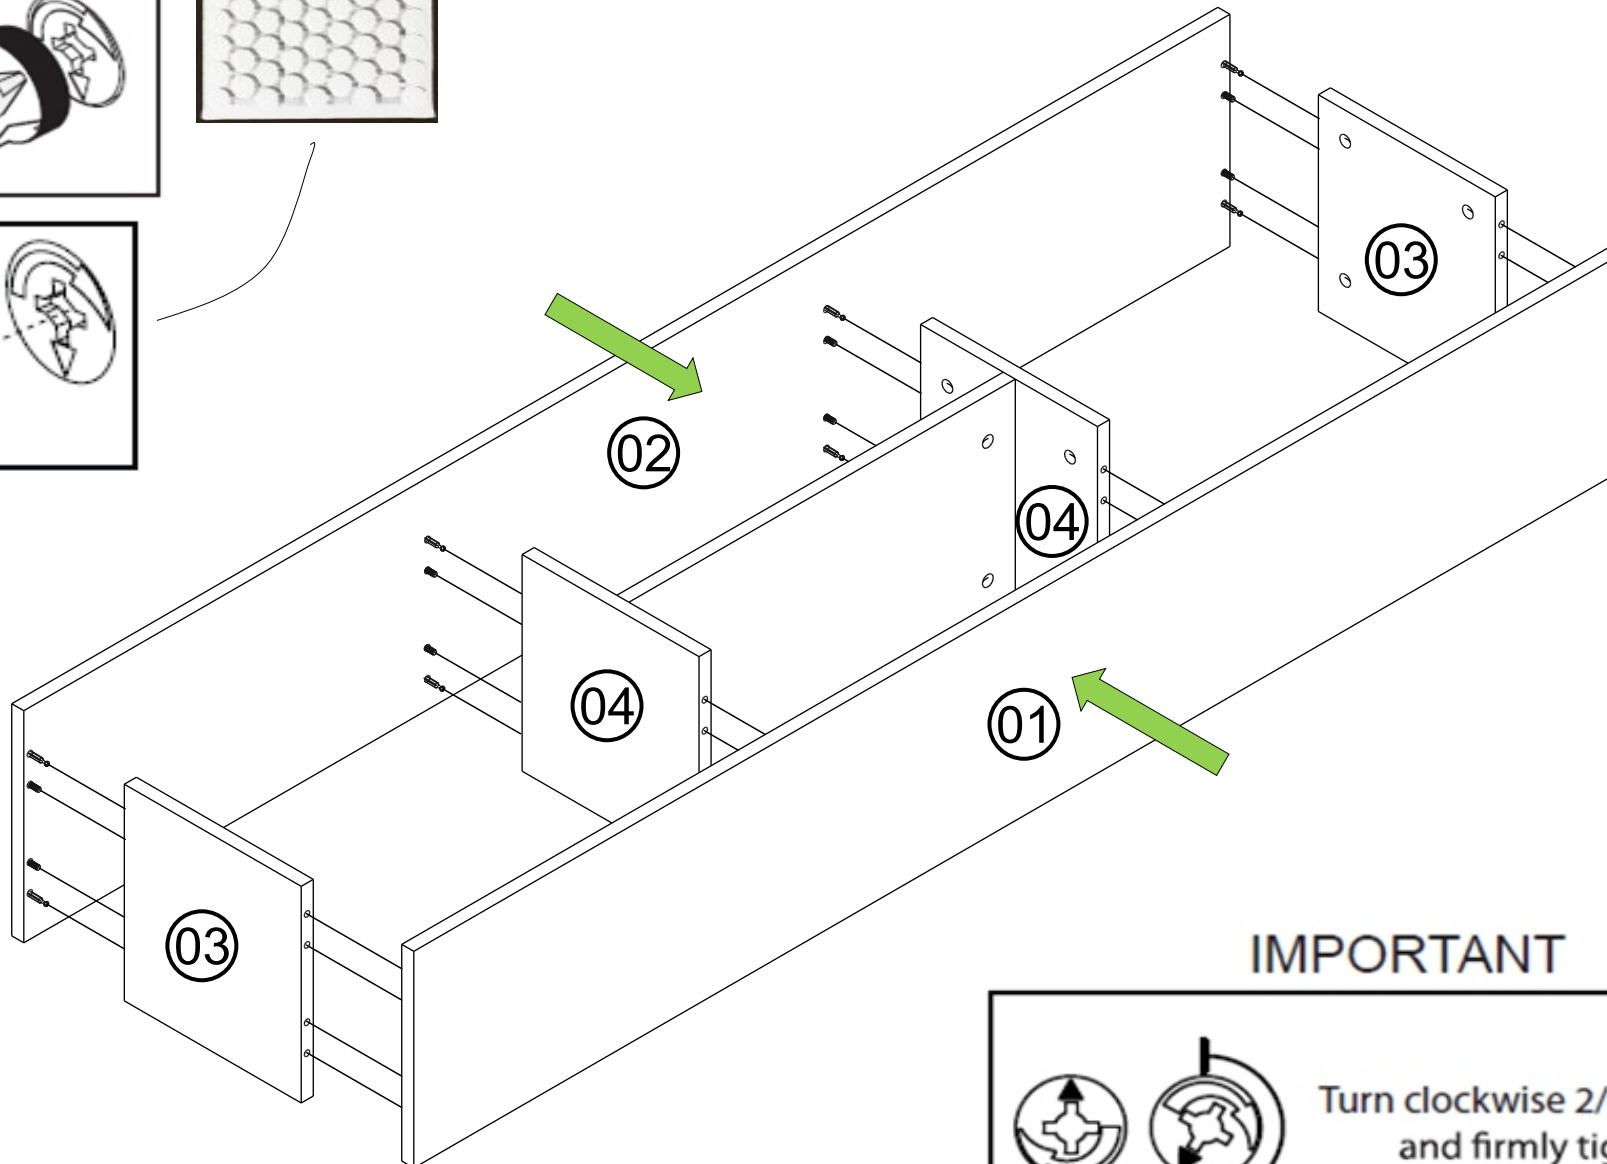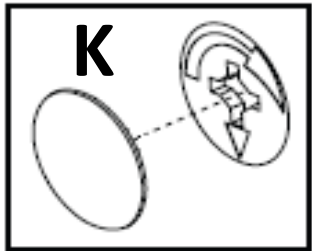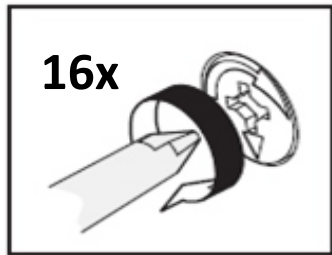   




IMPORTANT



Turn clockwise 2/3 of a turn  
and firmly tighten






## 6 You can hang the shelves on the wall as shown.

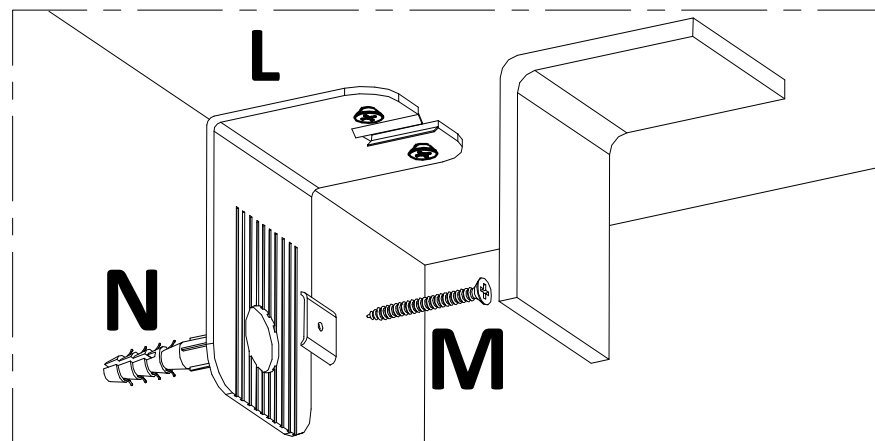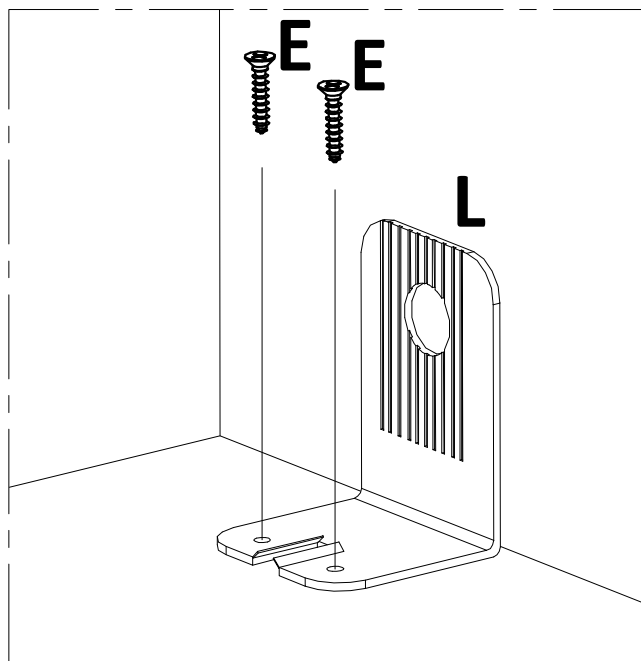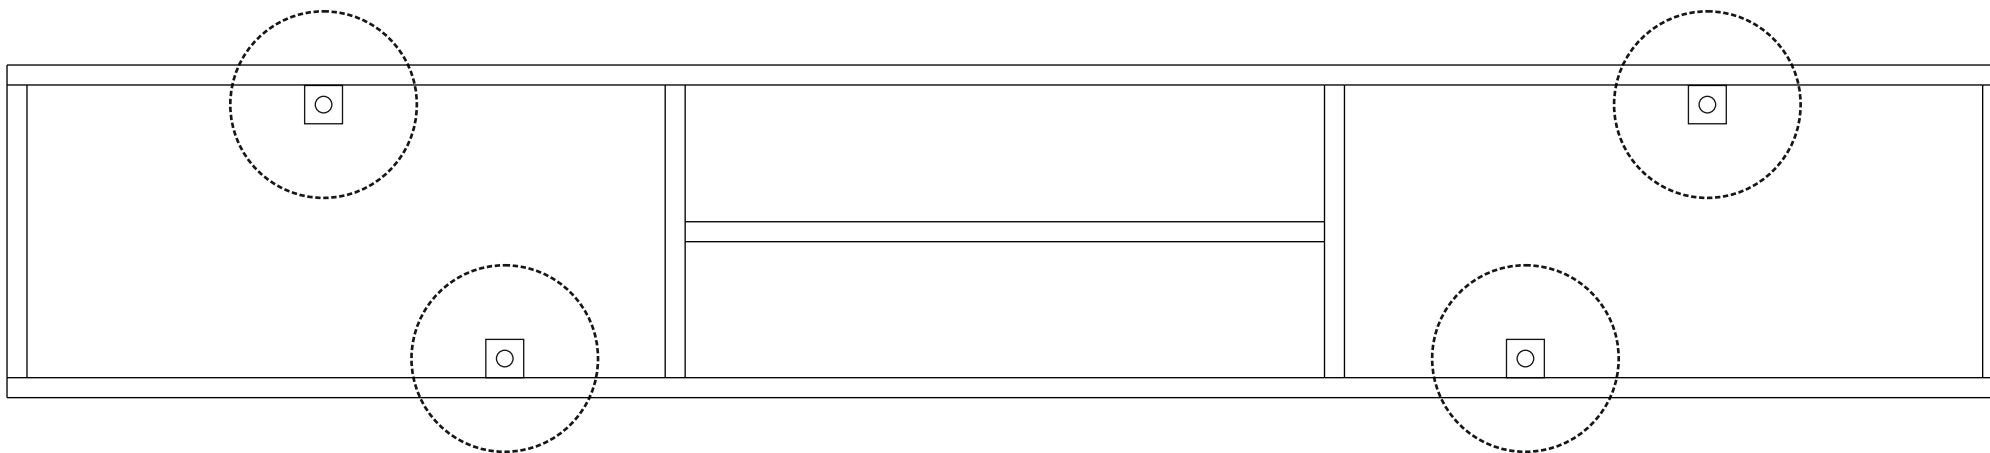   

# 7

   Fasten the doors 6, with the hinges, to the panel 1.

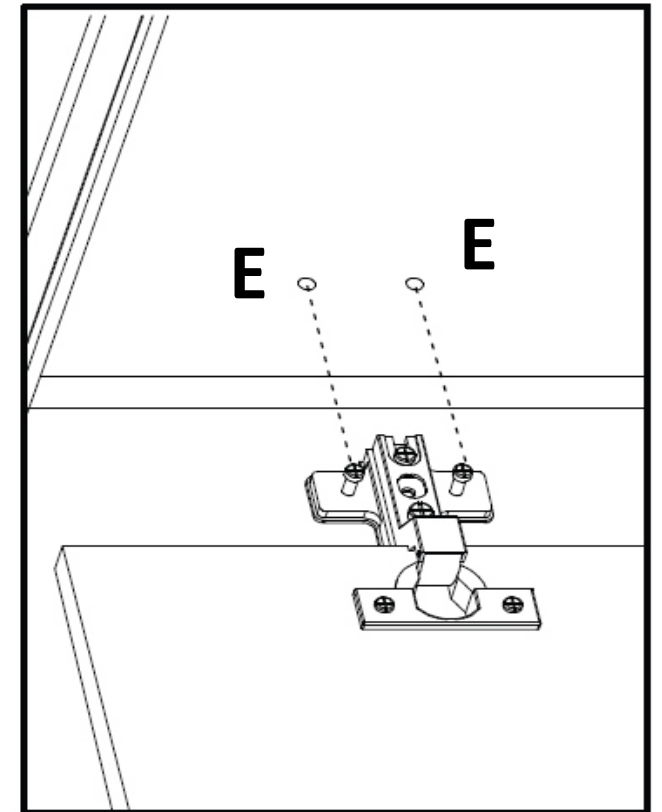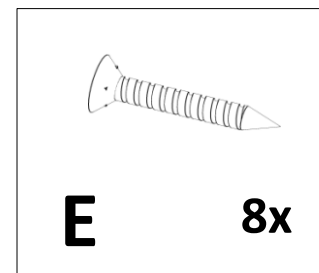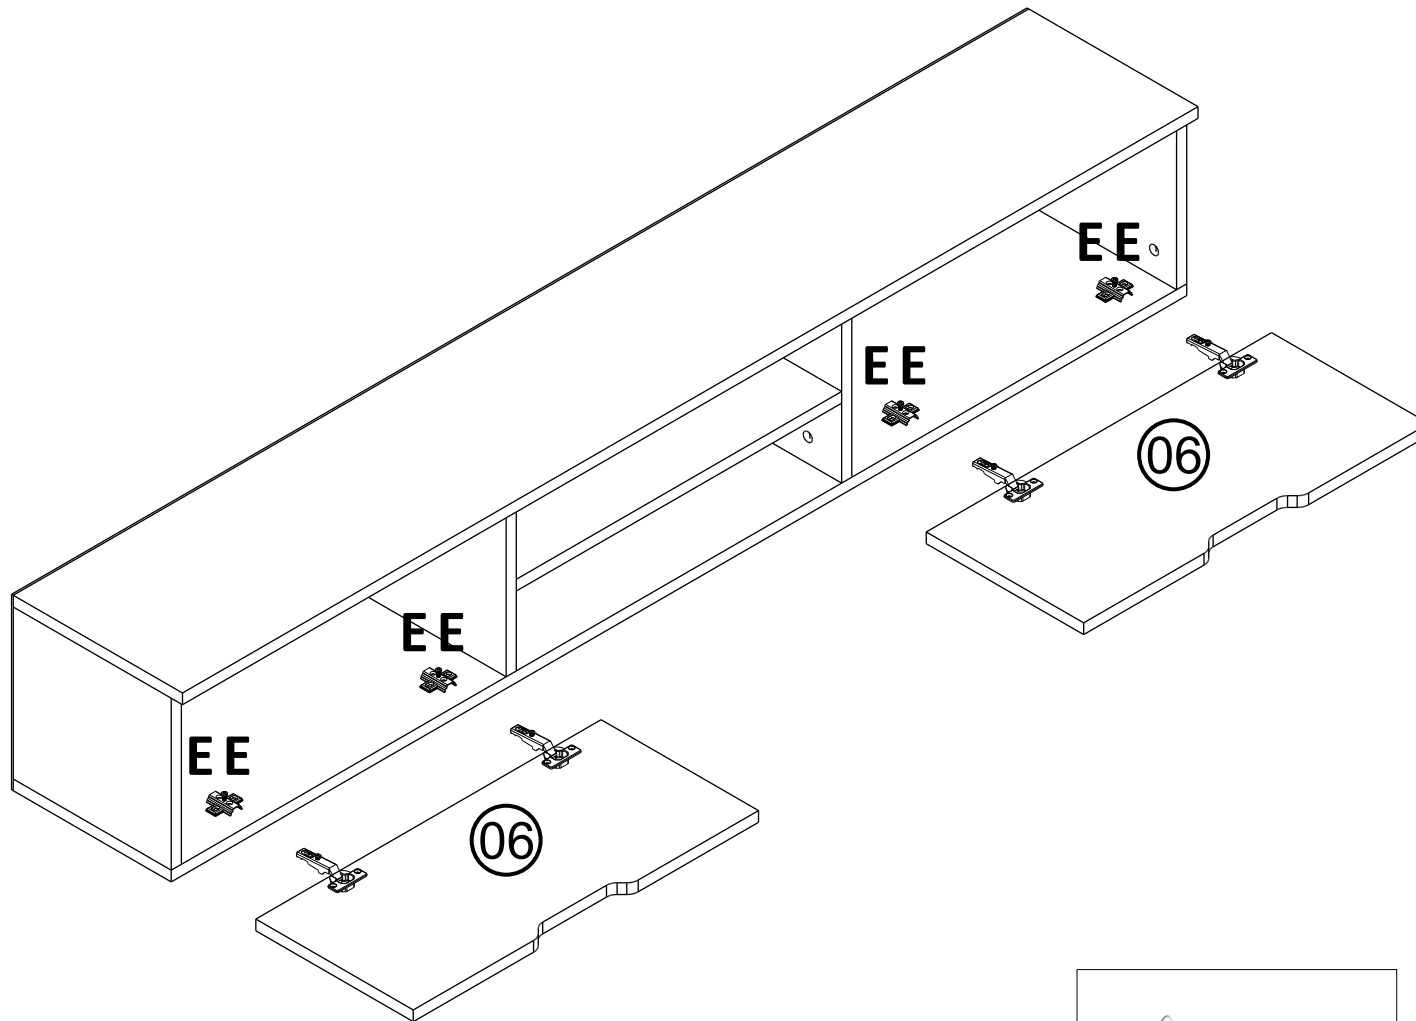

# 8

## Adjustment of hinges.

