 
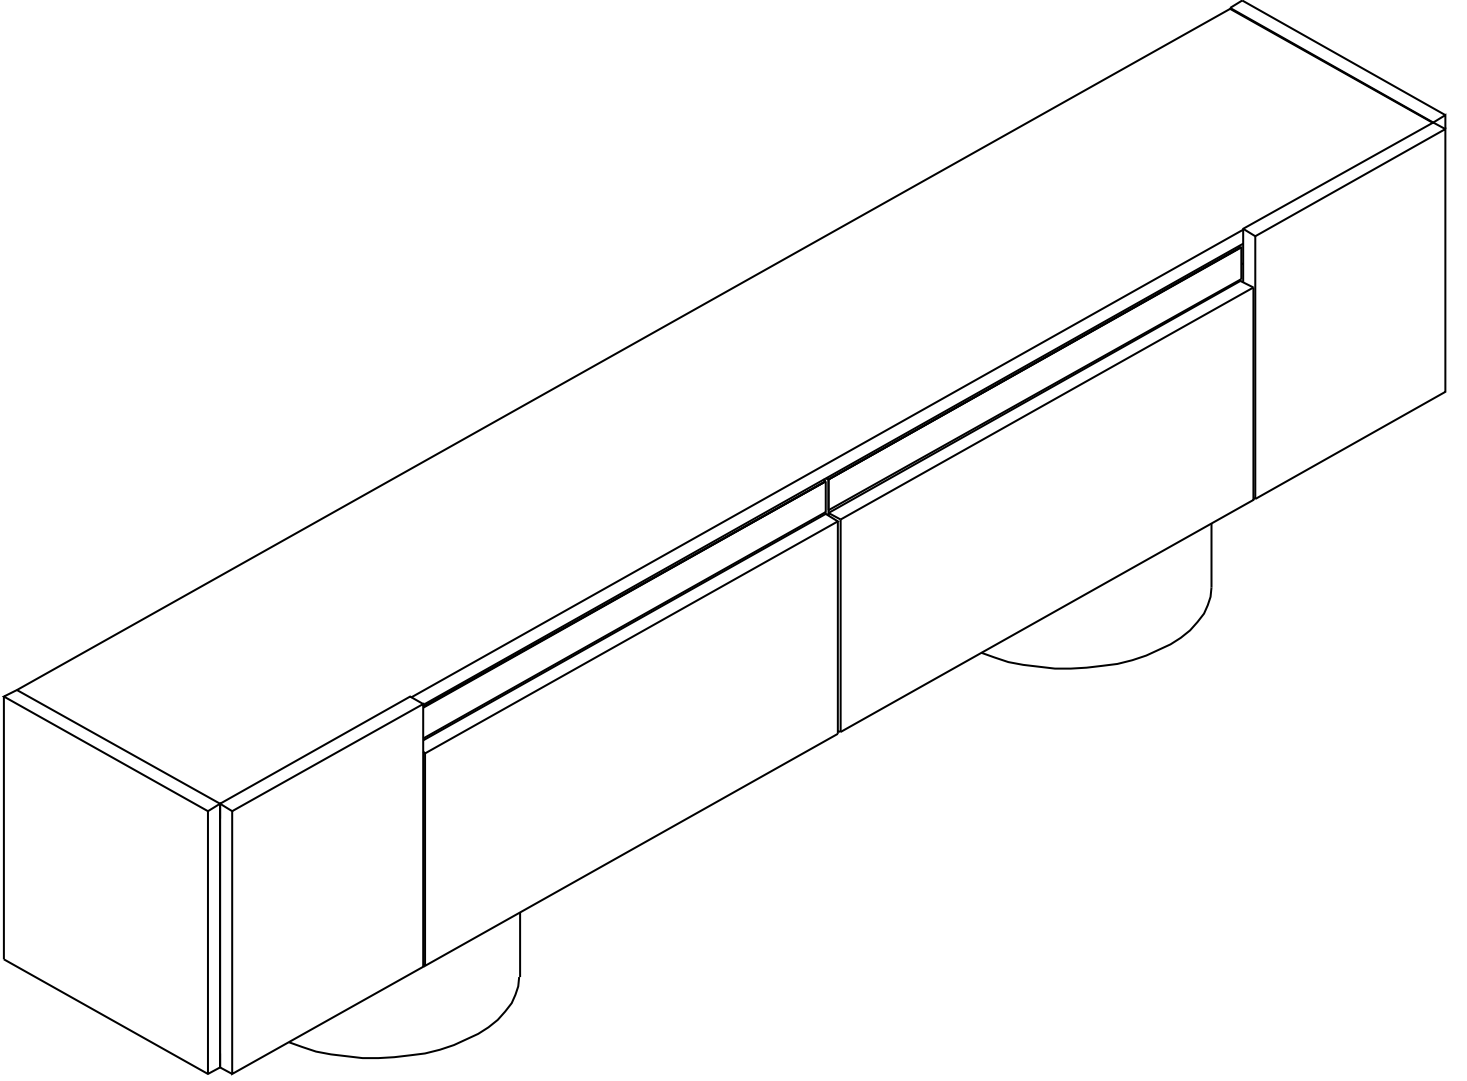 
 
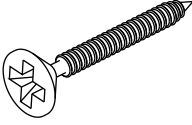 
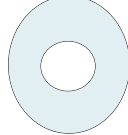 
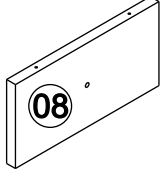 
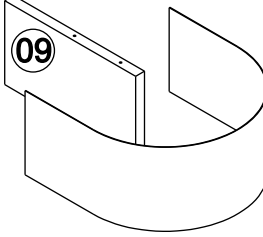 



BOHEM TV ÜNİTESİ

MONTAJ VE KULLANIM KILAVUZU

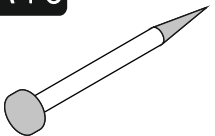


AKSESUAR LİSTESİ


A01  18x	A02  16x	A03  18x	A04  13x
A05  9x	A06  9x	A07  17x	A08  4x
A09  7x	 		A10  20x

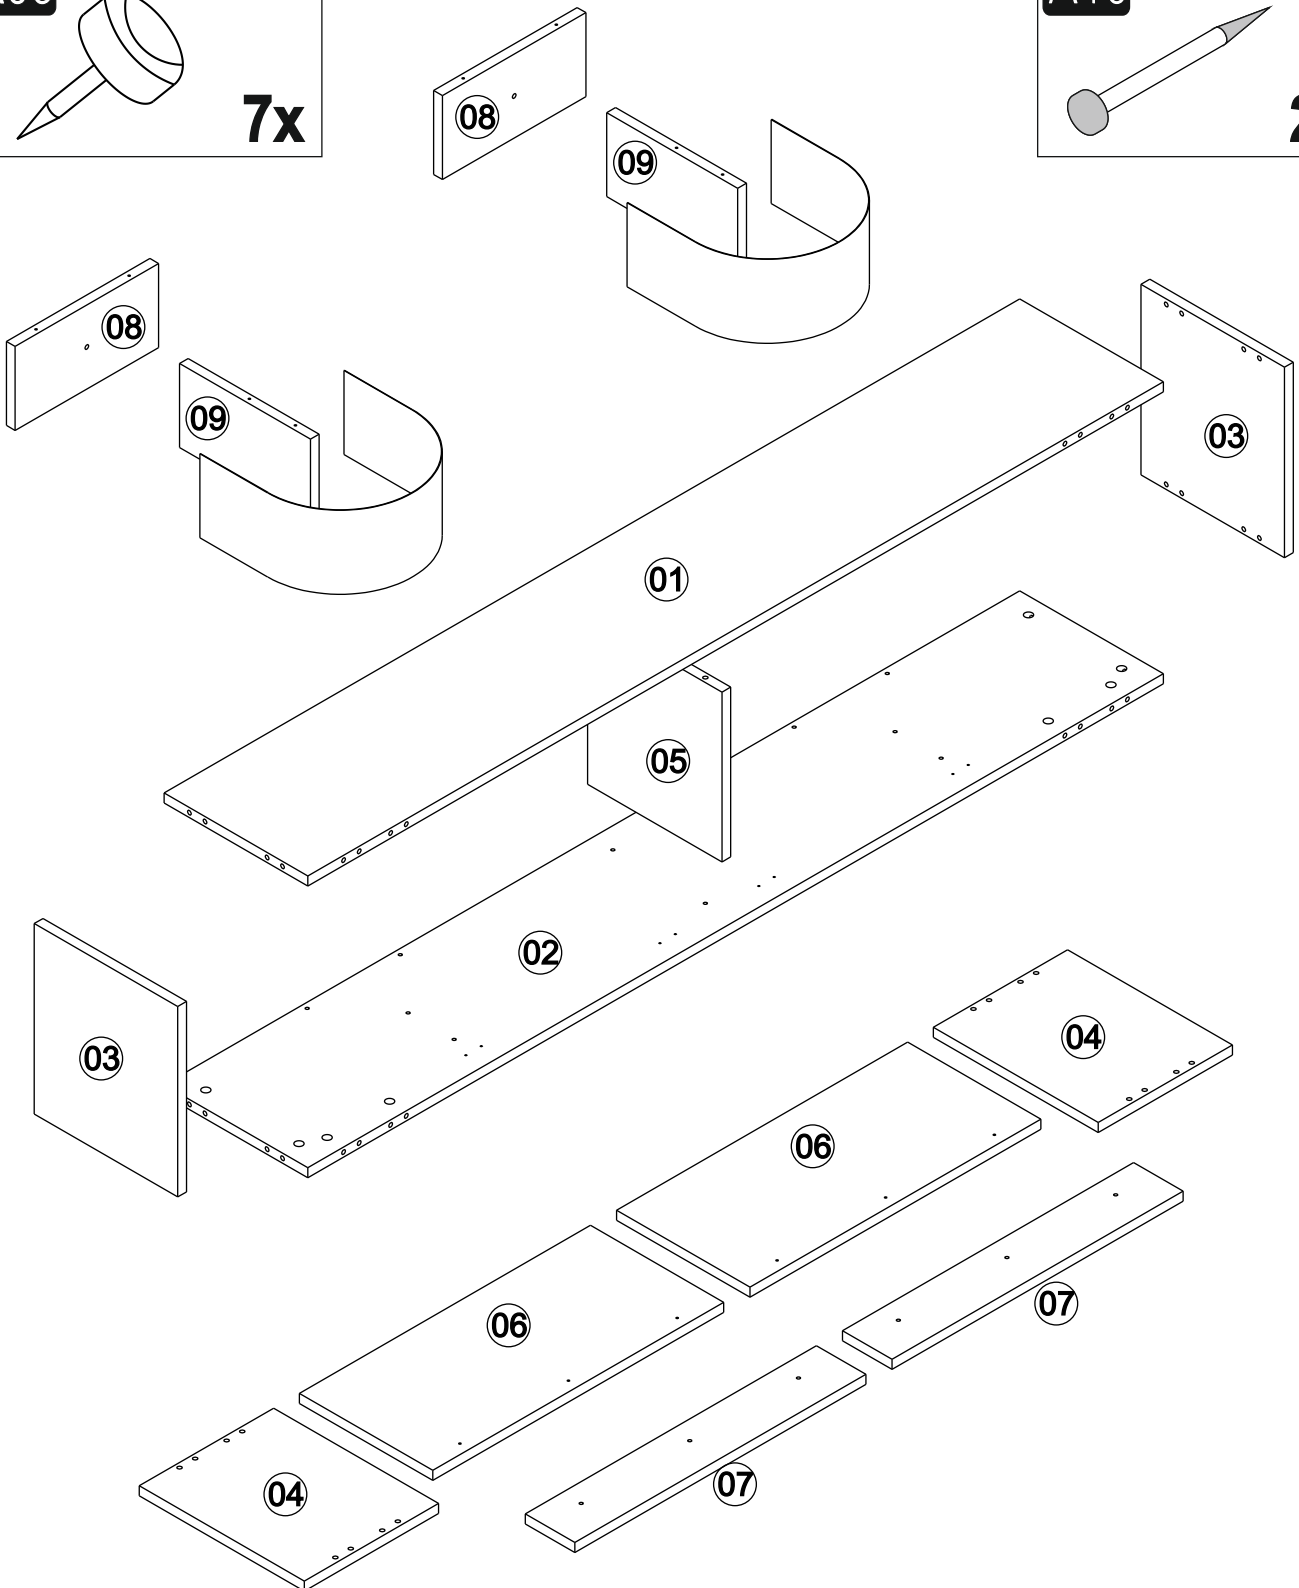 


01

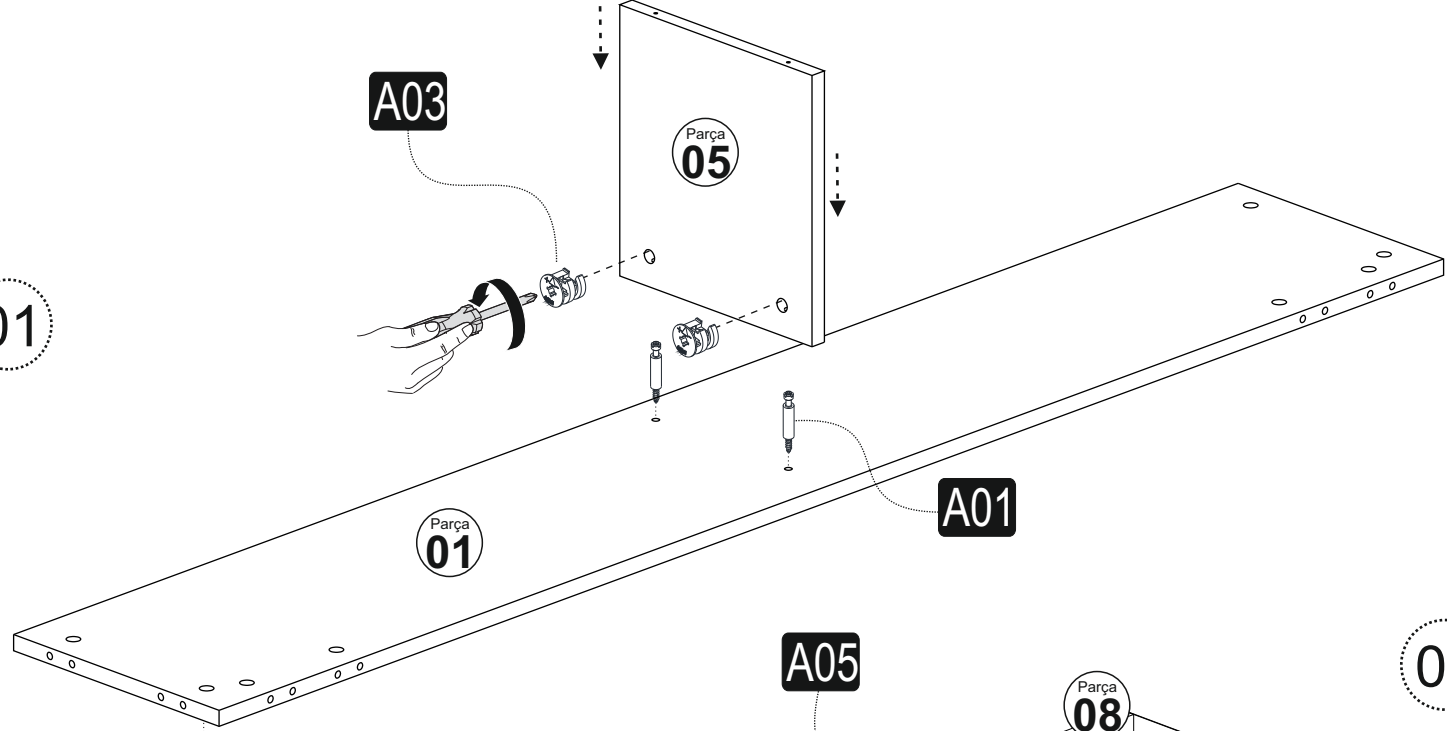 


02

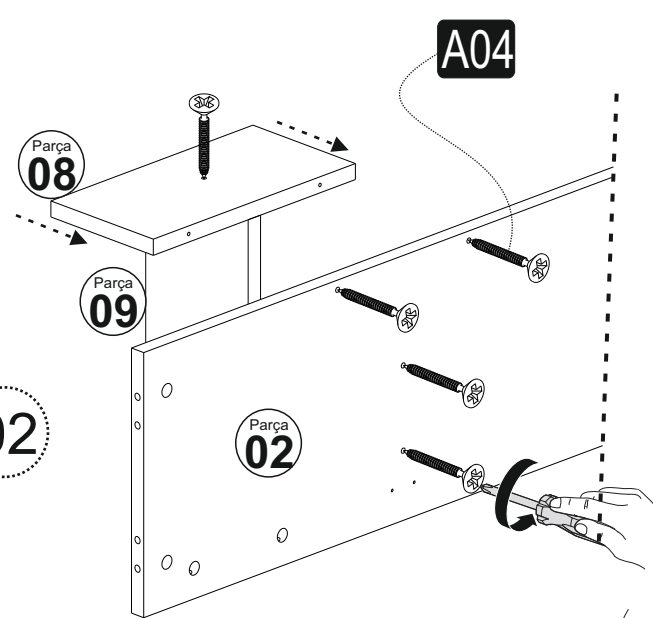 



03

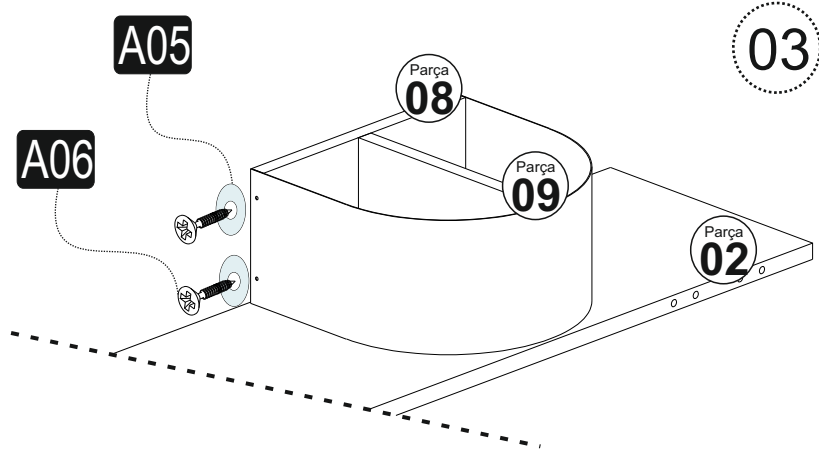 



04

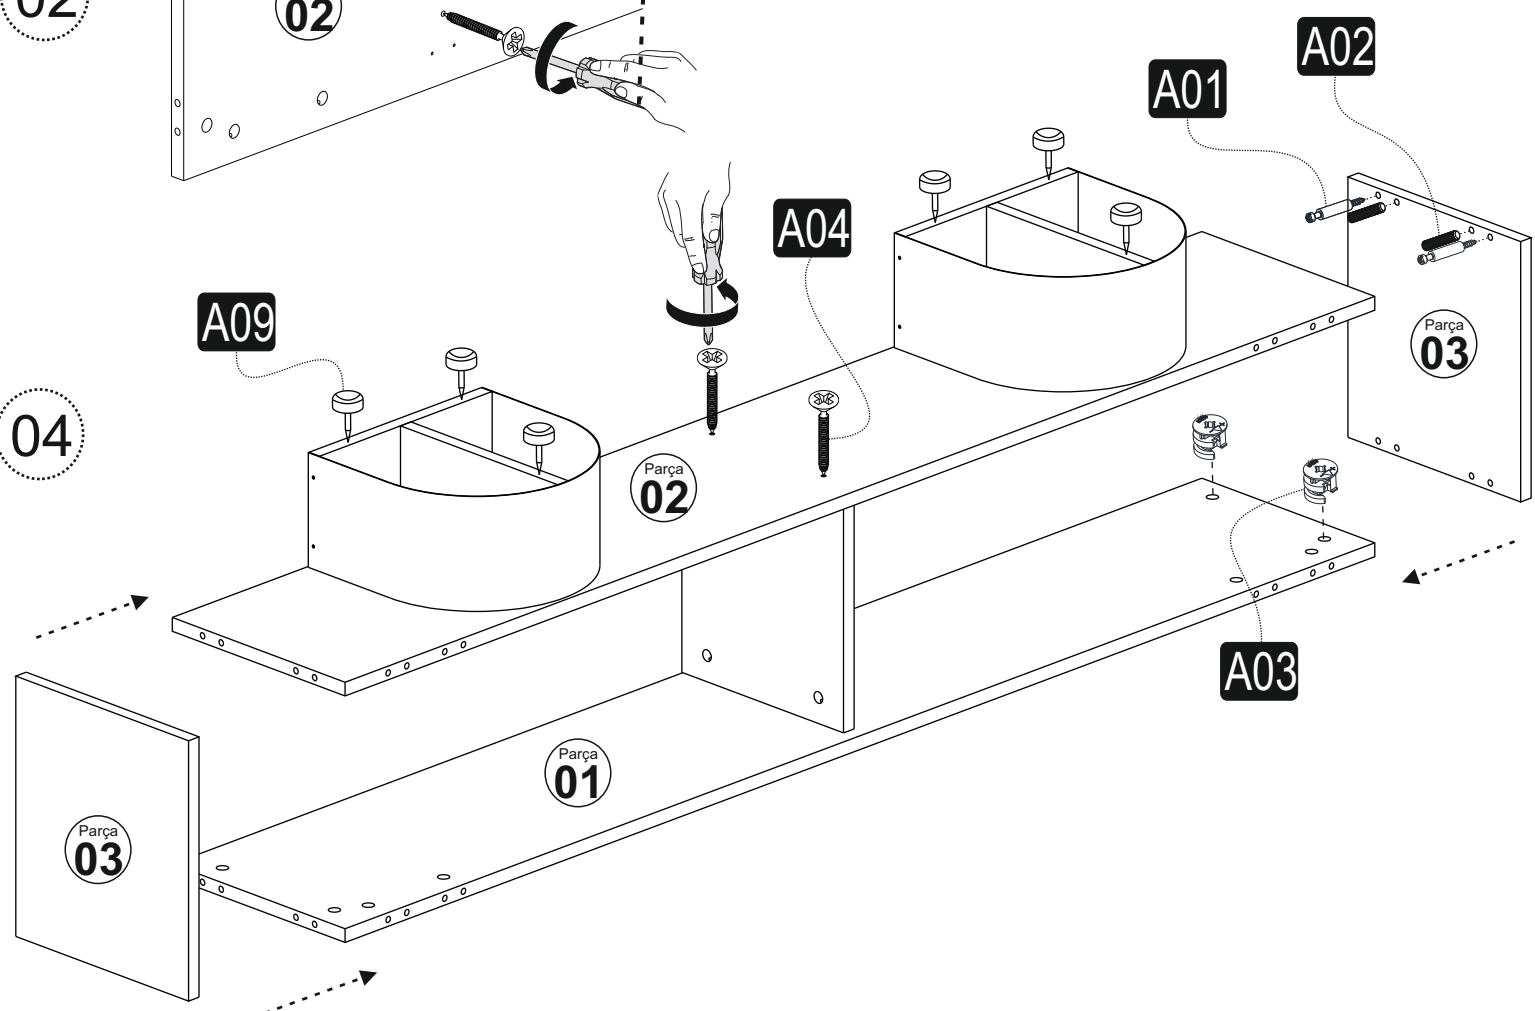 



05

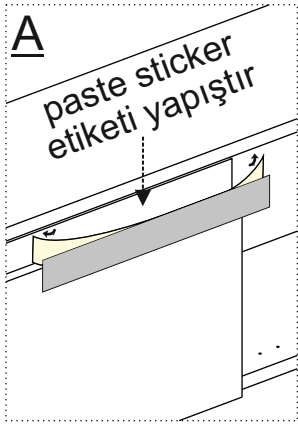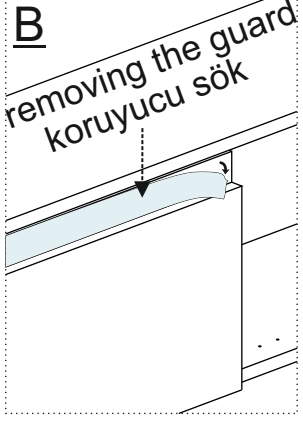  

A01 A02

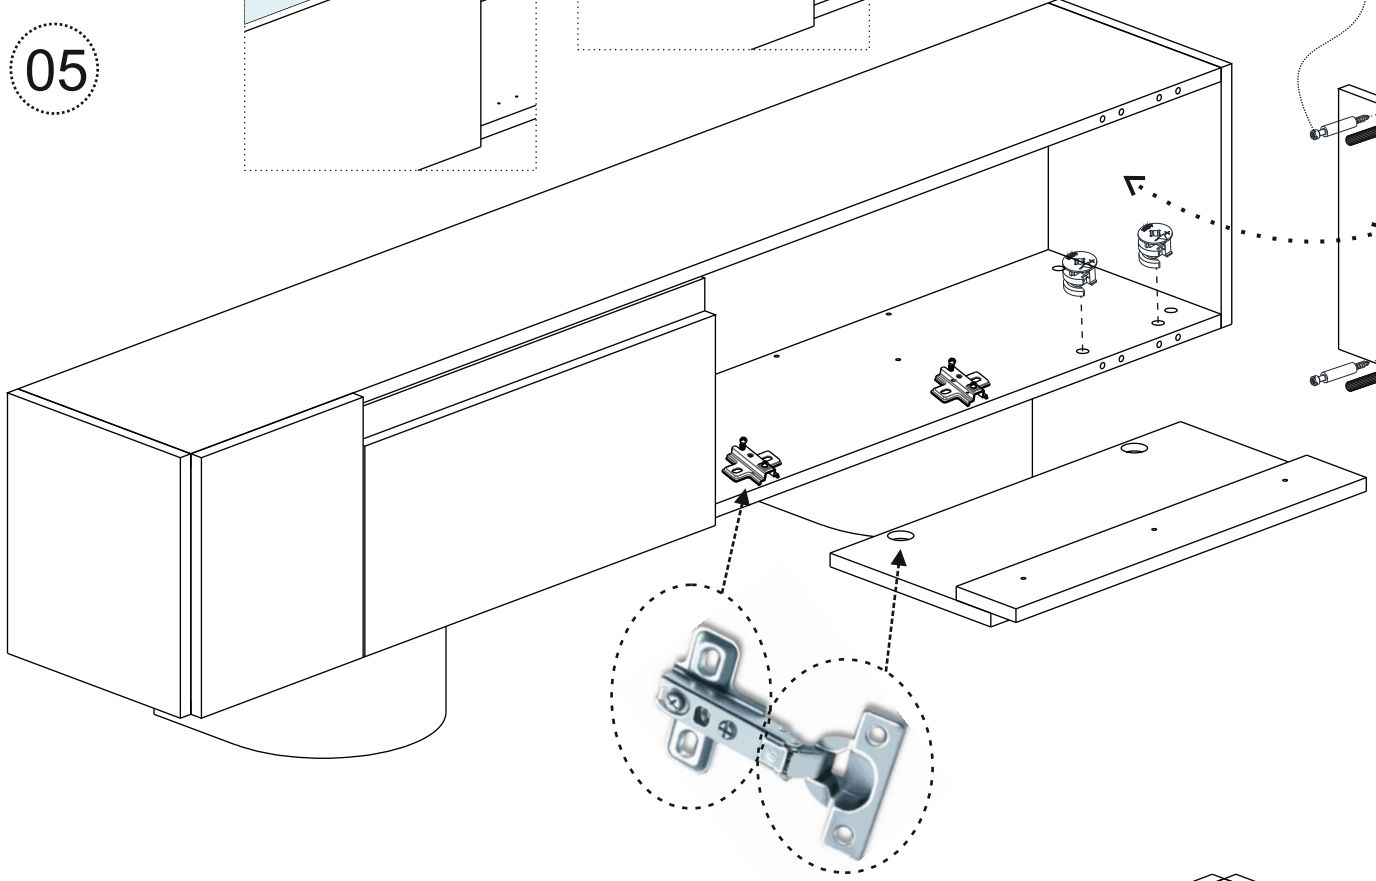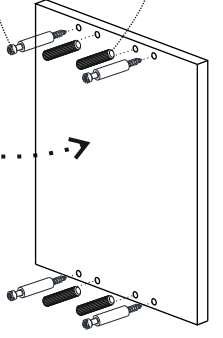  

06

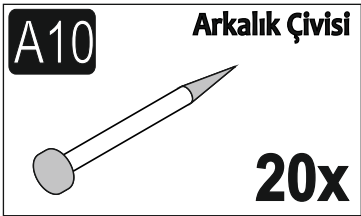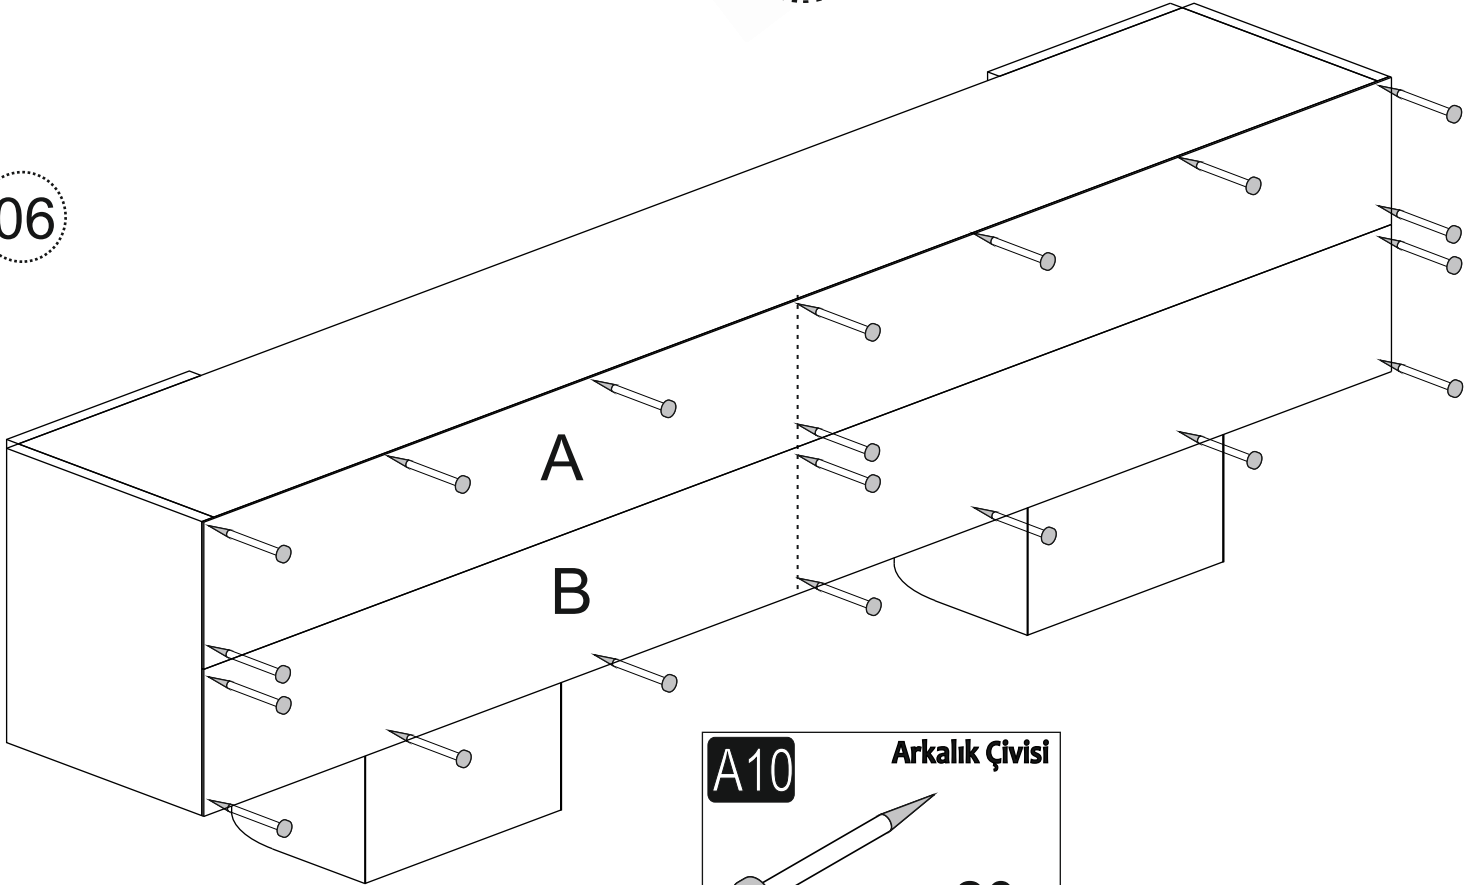  

20x