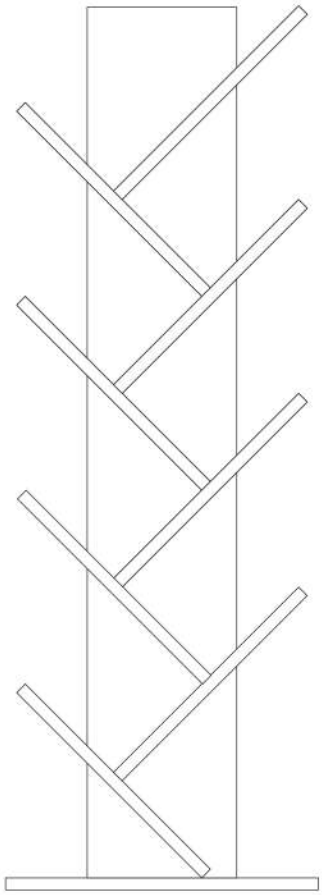

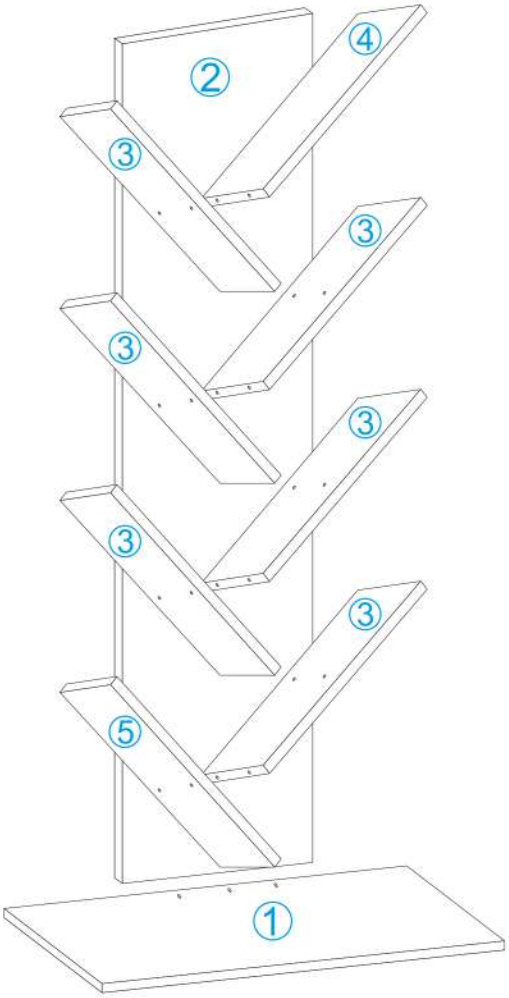

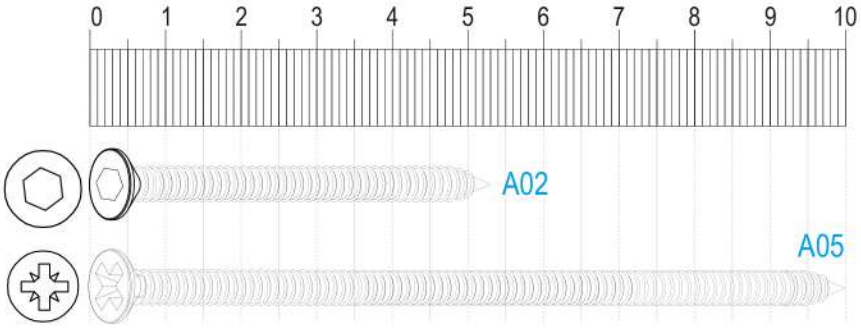

PART NUMBERS, DIMENSIONS AND QUANTITIES

1	460 x 220 x 18 mm.	x1
2	1280 x 220 x 18 mm.	x1
3	385 x 201 x 18 mm.	x6
4	385 x 201 x 18 mm.	x1
5	385 x 201 x 18 mm.	x1

Allen	Allen Head Screw	Adhesive White Plug	Dowel	5x100 mm. Screw
				
A01 1 Ad.	A02 33 Ad.	A03 15 Ad.	A04 1 Ad.	A05 1 Ad.



Dear Customer,

This product you have purchased has been subjected to all tests and controls by us before it reaches you.
Even in this case, it is possible that some parts may be damaged during transportation. If you encounter such a situation, do not send the entire product back.
Ask for the damaged part only. When requesting the required part, look at the service card and identify the exact part.
The missing part will be sent to you as quickly as possible.
Before starting assembly, check all parts and accessories in the boxes according to the lists.
After determining that the parts and accessories are complete and intact, start assembly.
Clean each part with a damp cloth before starting assembly.
If you have purchased more than one product, proceed to the next product after assembling a single product to avoid any confusion.
Always carry the product with the package for long distance transportation.
The surfaces of your furniture are very easy to clean. It is enough to wipe with a damp and soapy cloth or other household cleaners.
Since furniture is affected by extreme heat, cold and humidity, do not expose your furniture directly to these factors.
Do not use your furniture for other purposes.

TURN TO THE BACK PAGE

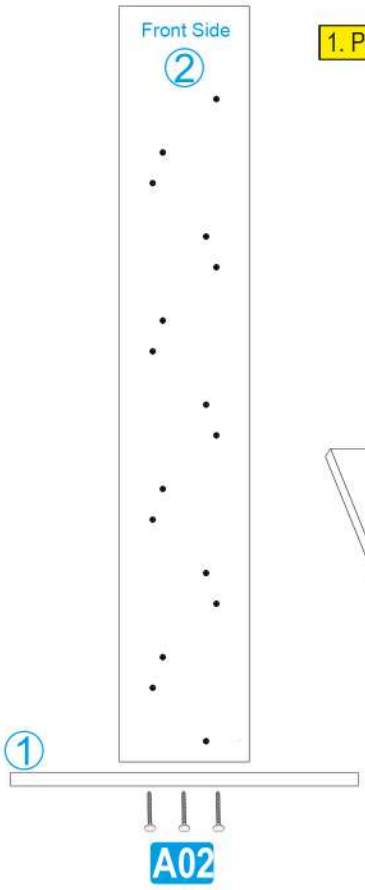

1. PROCESS Assemble parts 1 and 2 with allen (A01) and allen head screws (A02).

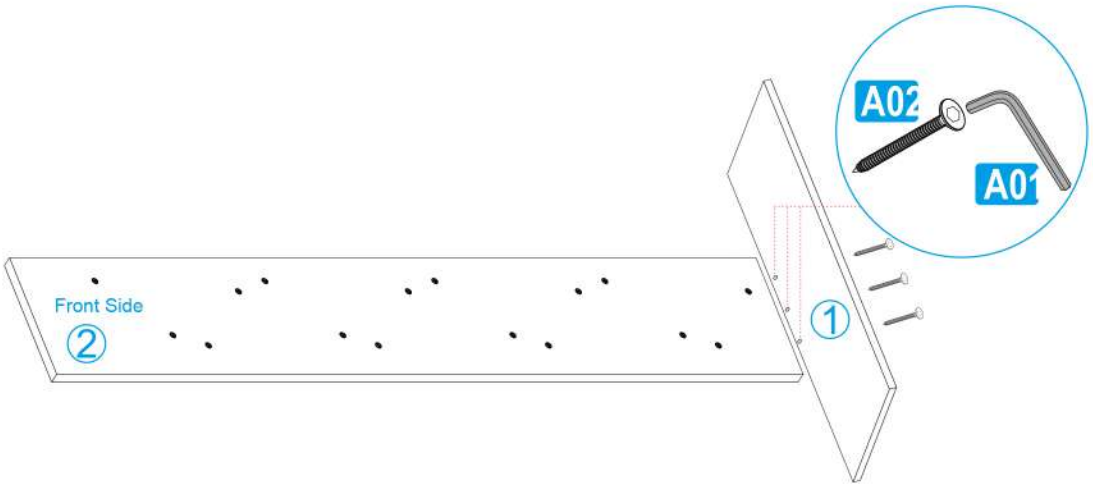

2. PROCESS Assemble parts 3,4 and 5 with allen (A01) and allen head screws (A02).

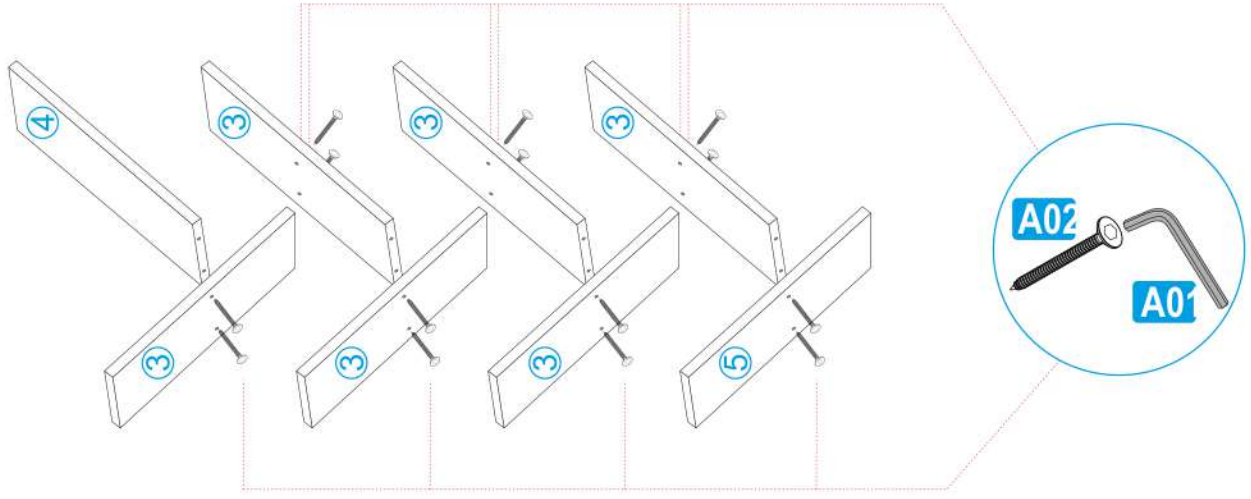

3. PROCESS Fasten the parts numbered 3,4 and 5 to the parts numbered 1 and 2 with allen (A01) and allen head screws (A02).

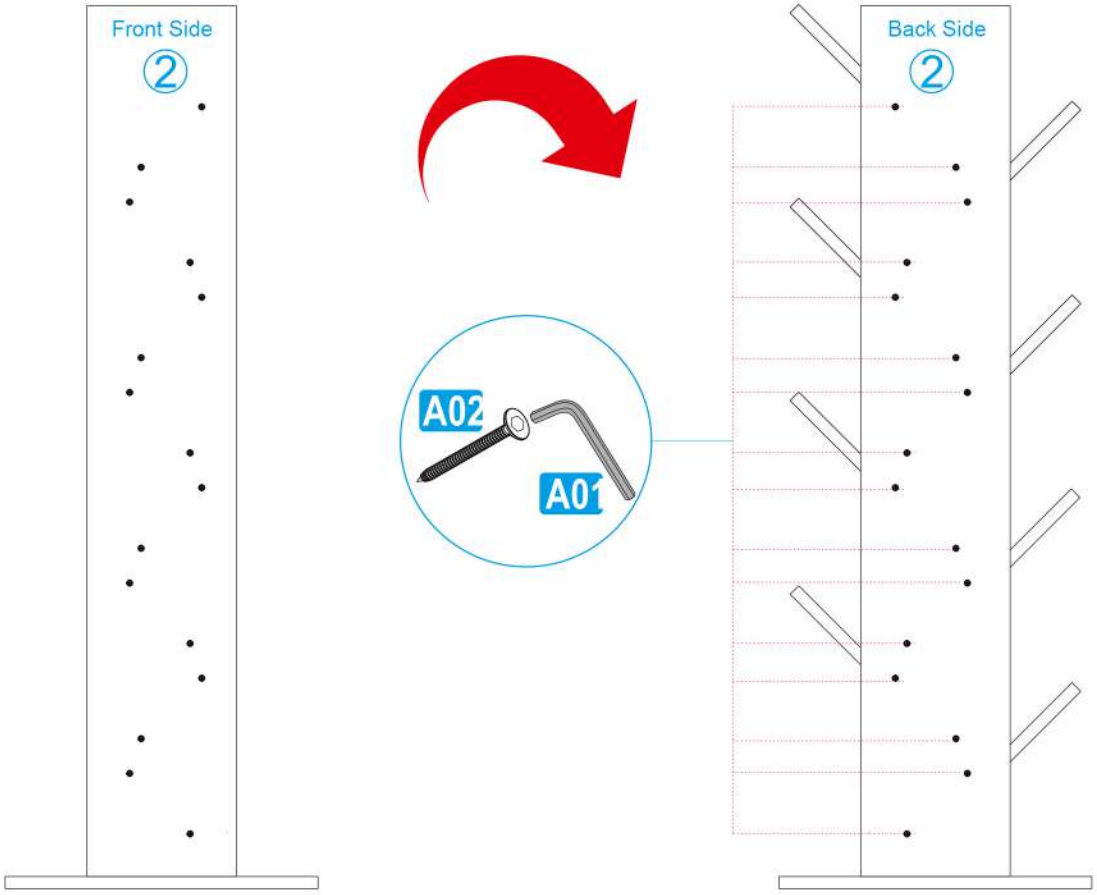

Dowel	5x100 mm. Screw
A04 1 Pc.	A05 1 Pc.

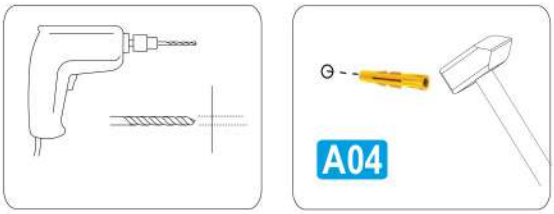

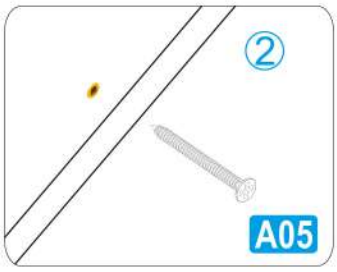



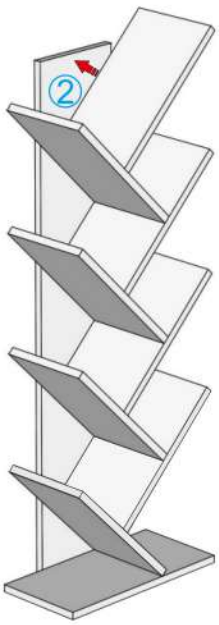

For the safety of you and your family, the best way to prevent accidents caused by tipping over is to fix the furniture. Fix the product to the wall from the back table with the dowel and screws included in the product. If there are no dowels and screws in the package, please request them.

Wall Fixing Guide

If the material used on your wall is not included in this list, or if you have any questions, we recommend that you contact an authorized craftsman in your region.

Wall Material
Situations where drywall or other gypsum board has a wooden frame or metal profile

Fixing Device
The screw is applied directly to the wooden frame or metal profile.



Wall Material
Parts without wooden carcass or metal profile

Fixing Device
Dowels or Screws



Wall Material
Stone Wall

Fixing Device
Hail Wall Dowels and screws
Hollow Wall: Elbow style



To prevent accidents that cause high furniture to tip over

Don't Forget to Pin!



We all want our home to be a safe place. But even the smallest accident in our homes can pose a great risk to all of us.

For this, it is especially important to fix the furniture in the rooms to the wall.

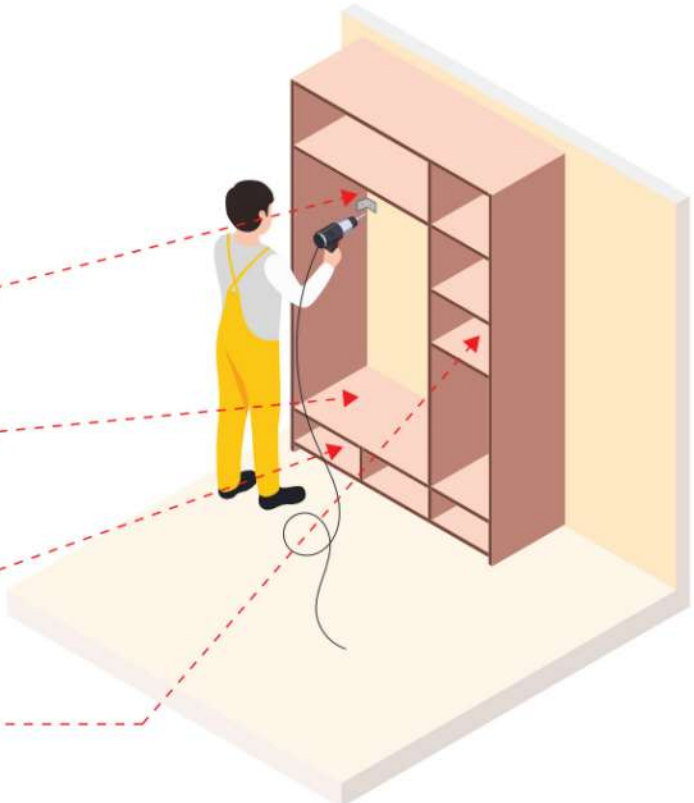

- Fix it! Use the anti-tipping material supplied with the product and suitable for your wall type. (Dowels, Screws, etc.)
- Do not place televisions or heavier items on unsuitable furniture.
- Heavy items should be placed in the bottom drawers of furniture to prevent tipping.
- Children should not be allowed to climb or hang on drawers, doors or shelves.