


## 6 Doors 2 Drawers wardrobe

S1

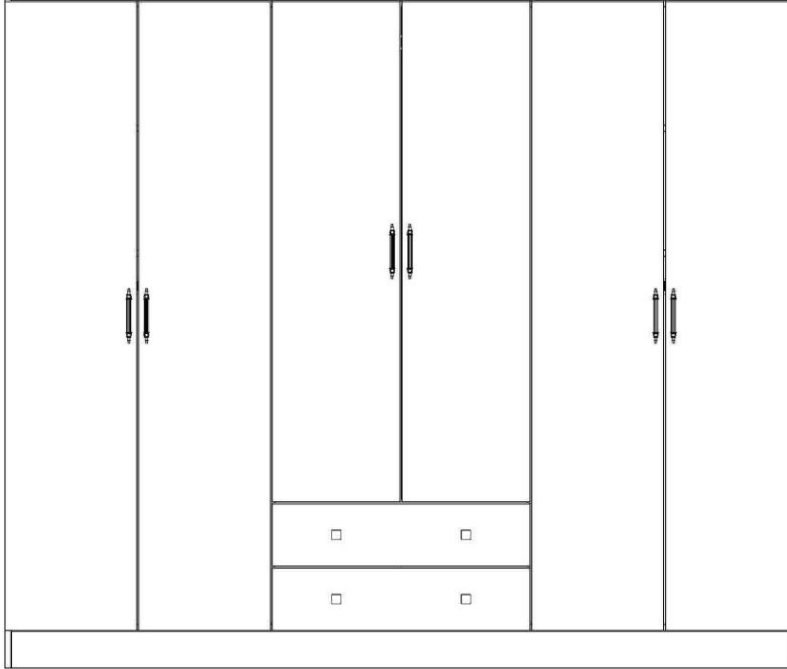












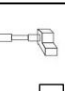



**WARNING:** Serious or fatal injuries due to crushing may occur as a result of furniture falling over. This furniture must ALWAYS be fixed to the wall with fixing brackets. To reduce the risk of serious or fatal injuries due to rollovers:

- 1- Place the heaviest items in the bottom drawer.
- 2- Do not place the TV or other heavy items on this product. Do not place it.
- 3- Children should not be placed on drawers, doors or shelves. Do not allow them to hang or climb.




Before starting the installation, make sure that all parts are complete. It is recommended to install with 2 people.

FOR ACCESSORY									
	minifix body 44 pieces	10 mm minifix shaft 44 pieces	8 mm chisel 36 pieces	4 x 18 screws 96 pieces	handle screw 8 pieces	minifix plug 44 pieces	flat hinge 6 pieces	trunk rail 4 pcs	
									
	nail 3 mm 15 pieces	Drawer handle 8 pieces	hanger pipe 3 pieces	hanger flange 6 pieces	shelf pin 8 pieces	half camel hinge 10pcs	drawer rail 4 pcs		


All of our products have been checked and tested at every step, from the design process to the production and delivery process, to ensure that you enjoy the products and use them safely for many years. Before starting the assembly, take all the parts out of the box and check them according to the assembly manual. If you have purchased more than one product, install the products in order to avoid mixing parts and accessories. Before starting the assembly, clean each part with a damp cloth. This cleaning will also be sufficient for general use of the product. Although the products are carefully checked and packaged, if you encounter a problem during shipping, you can check the necessary parts and send an e-mail to [bilgi@sunroyalconcept.com](mailto:bilgi@sunroyalconcept.com) or contact us via the contact numbers on our website. Any problem that occurs will be fixed free of charge as soon as possible. Do not use your furniture for purposes other than its intended purpose. Please contact us when considering different purposes of use. Furniture can be damaged when it comes into direct contact with cold, heat or moisture. Therefore, prevent your furniture from coming into direct contact with these factors.

6 Doors 2 Drawers  
wardrobe

S2

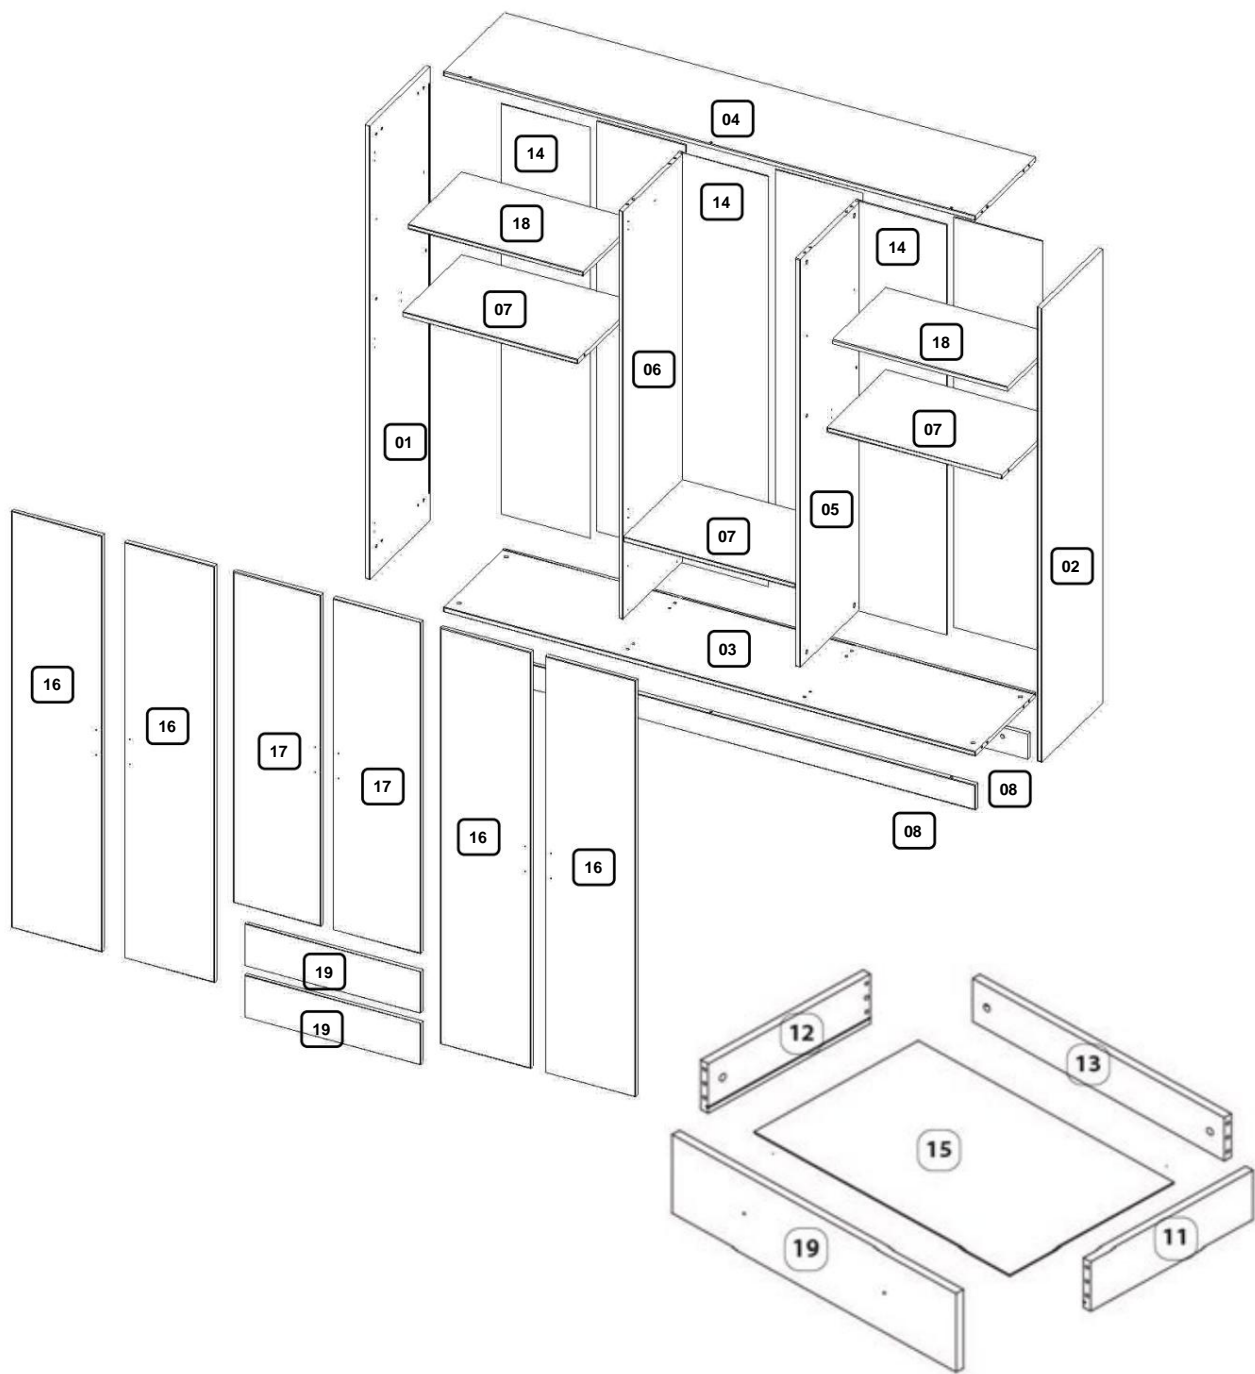


NO	NAME	THICKNESS	LENGTH	WIDTH	PIECE	NO	NAME	THICKNESS	LENGTH	WIDTH	QTY
...	Left Panel	18	1820	480	...	11th	Drawer Right Panel	18	400	110	2
2	Right Panel	18	1820	480	...	12	Drawer Left Panel	18	400	110	2
3	Bottom Table	18	2064	480	...	13	Drawer Rear Panel	18	620	...	2
4	Top Table	18	2064	480	...	14	Cabinet Back	3	1661	347	6
5	Right Strut	18	1654	480	...	15	Drawer Base	3	637	408	2
6	Left Strut	18	1654	480	...	16	Long Cover	18	1698	347	4
7	Fixed Shelves	18	673	465	3	17	Short Cover	18	1342	347	2
8	Lower Legs	18	2064	80	2	18	Mobile shelf	18	682	445	3
						19	Drawer Cover	18	174	698	2
						20	Glass / Mirror	3	1250	247	2

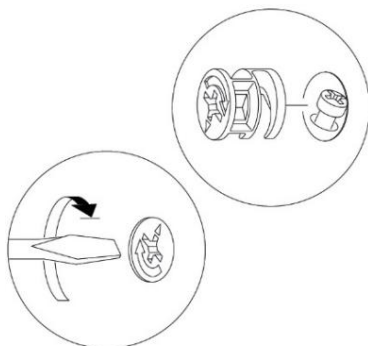


**01**

Assemble part no. 03 to the back side, part no. 08, using accessories B and A.

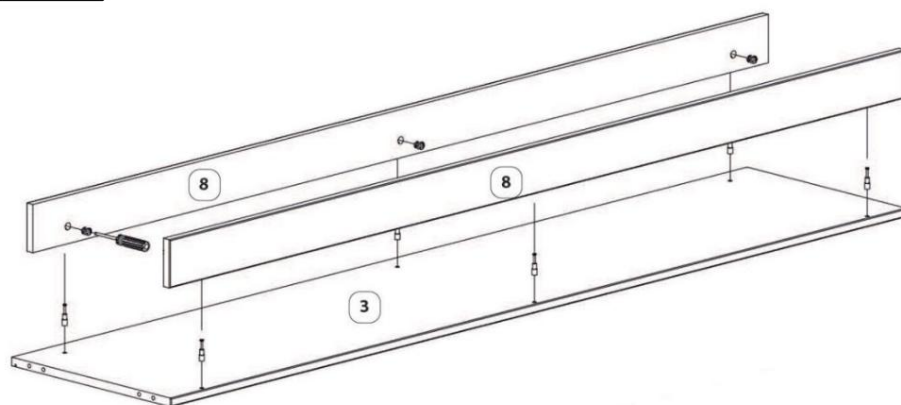


**02**

Assemble part 02 to part 03 using accessories A, B and C in the picture.

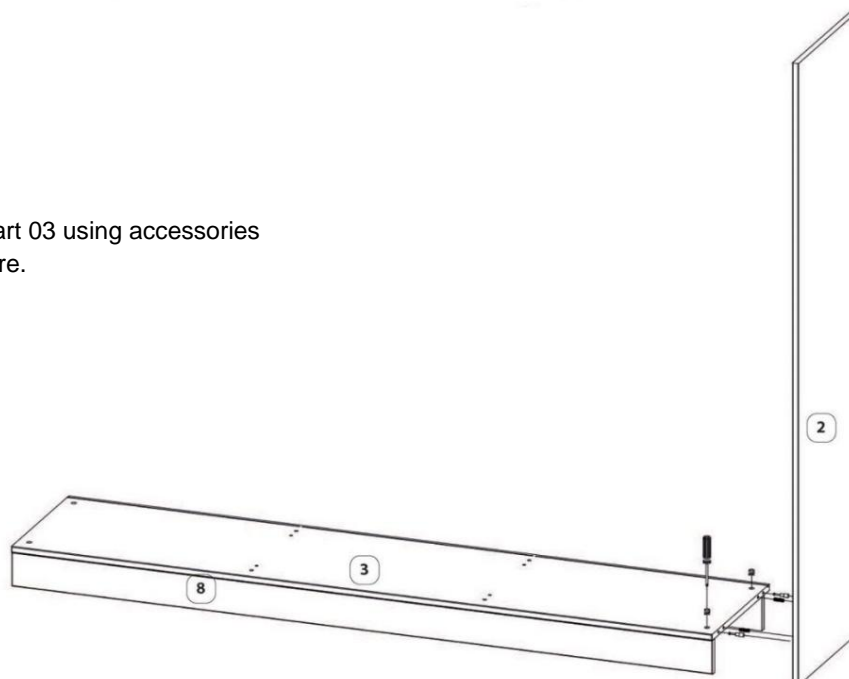

**03**


Part 07 is placed between A and B in the picture. Assemble it to part 02 using the accessories.

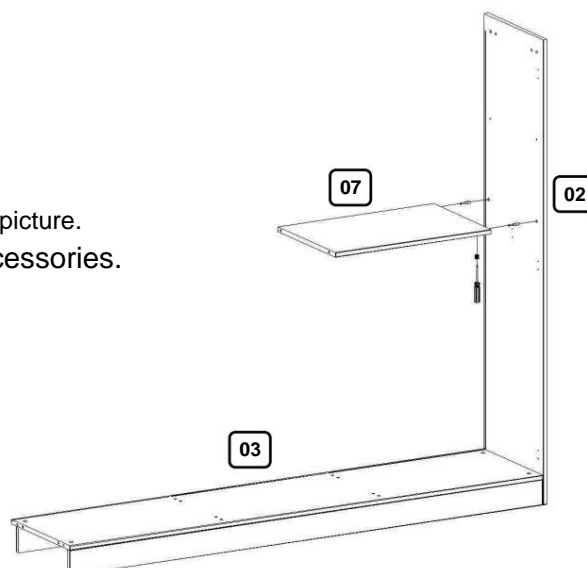

**04**


Assemble part 05 to parts 07 and 03 using accessories A and B in the picture.


Place piece 14 on the remaining parts behind it.

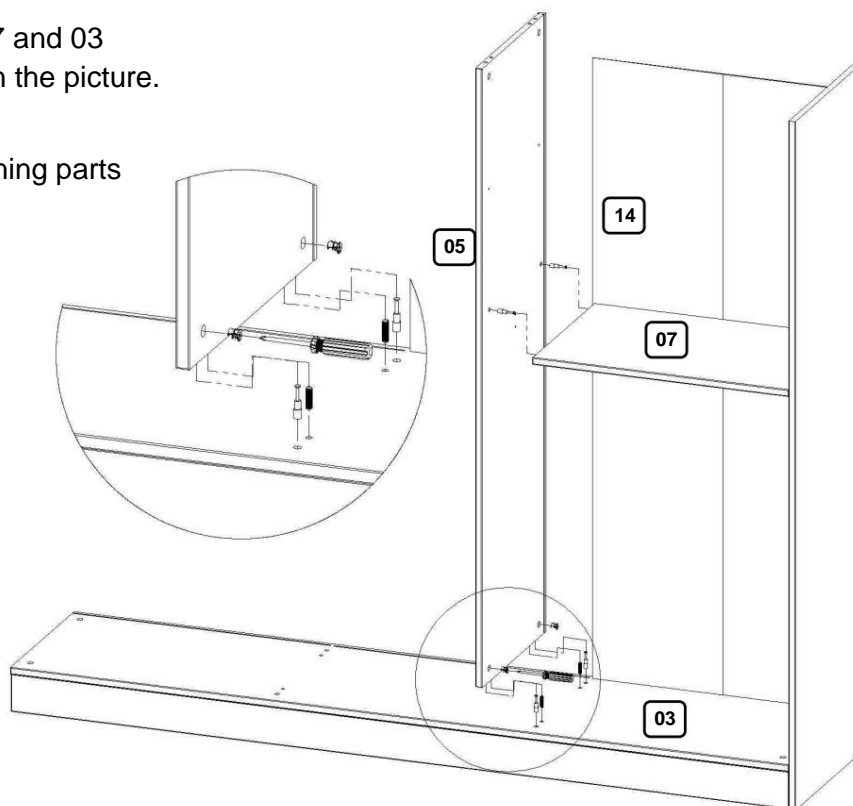

**05**



Assemble part 07 to part 05 using accessories A and B in the picture.

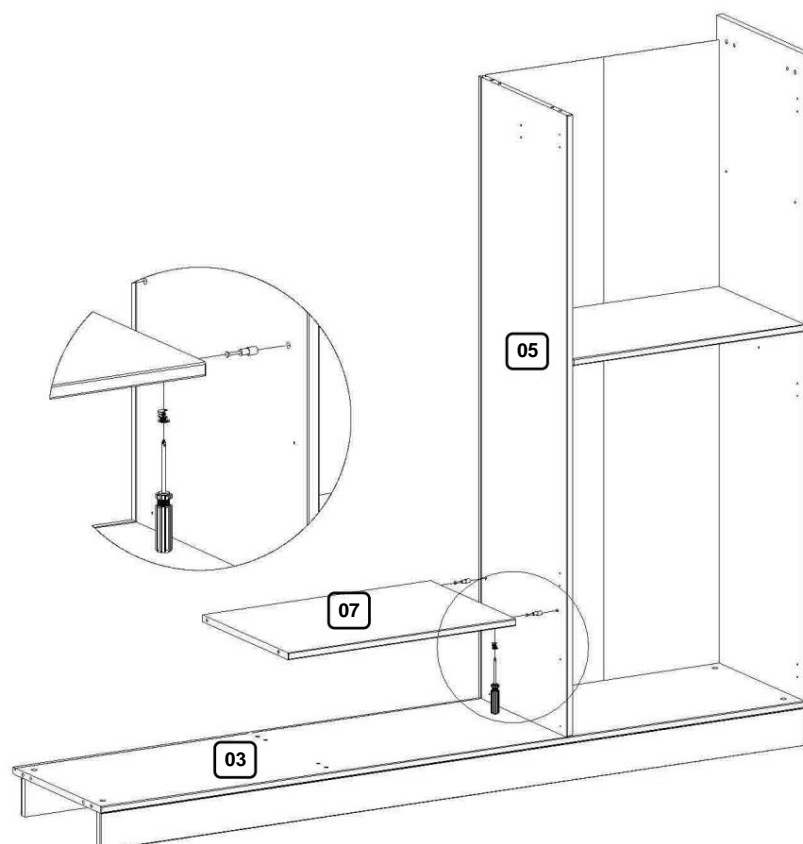

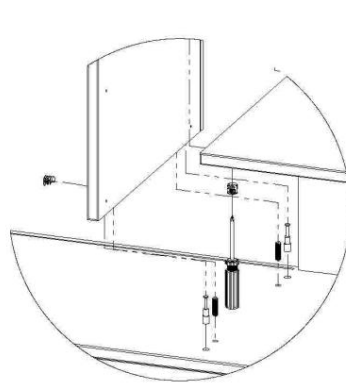


**06**

Part 06 is placed between A and B in the picture.  
Assemble it to parts 07 and 03 using the  
accessories.  
14 to those who remain behind  
Place part no.

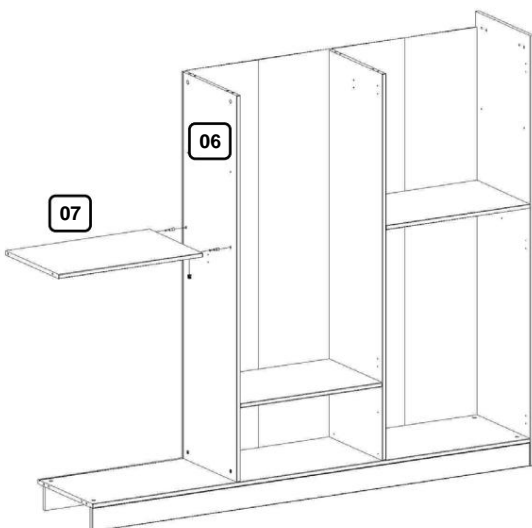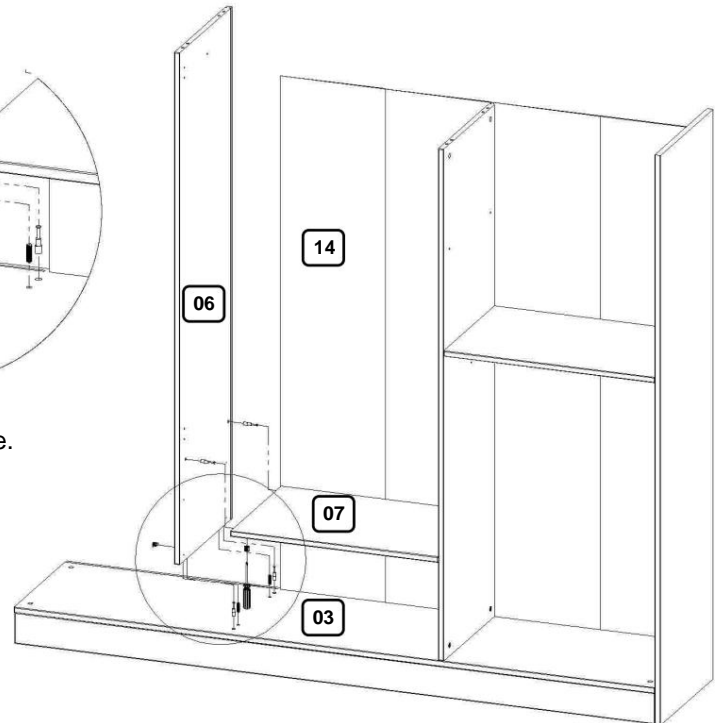

**07**


Part 07 is placed between A and B in the picture.  
Assemble it to part 06 using its accessories.

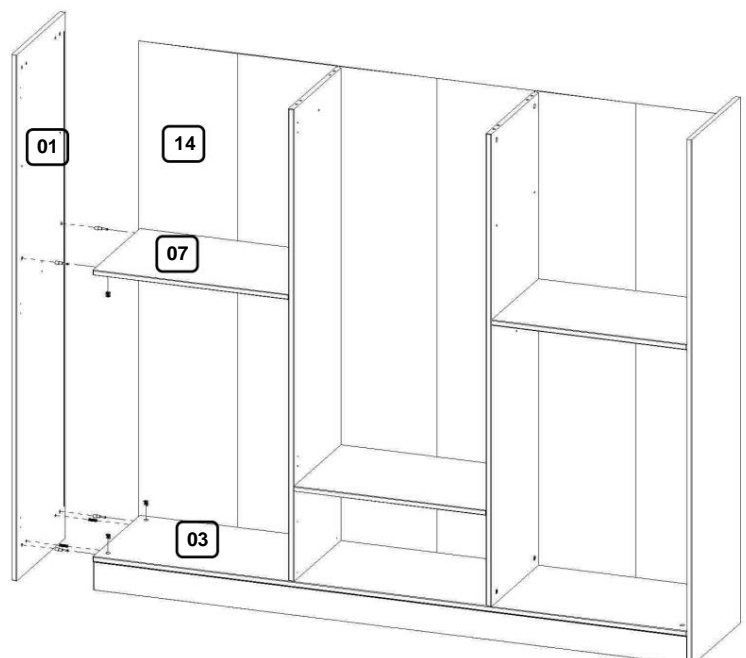

**08**

Assemble part 01 to parts 07 and  
03 using accessories A, B  
and C in the picture.


To those left behind  
Place part 14.

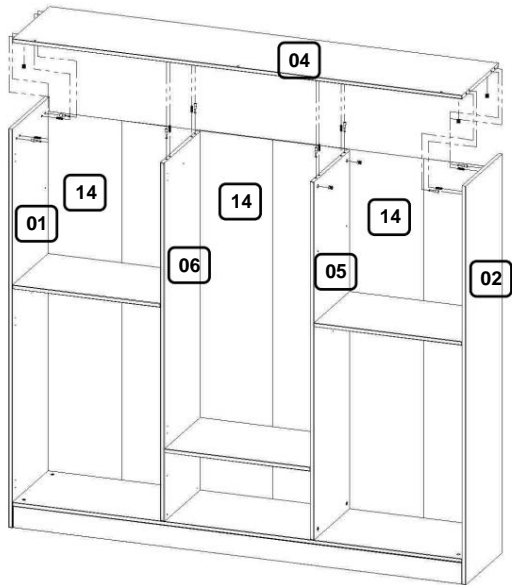

**09**



Assemble part 04 to parts 01, 02, 05 and 06 using accessories A, B and C in the picture.

To those left behind  
Place part number 14.

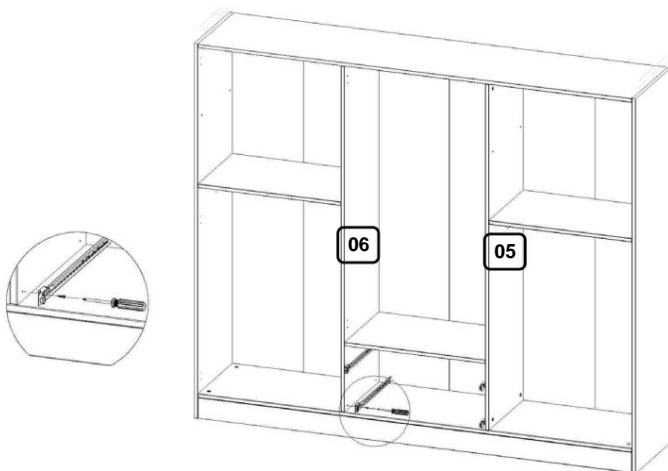

**10**

Assemble accessory K to parts 05 and 06 using screw E.

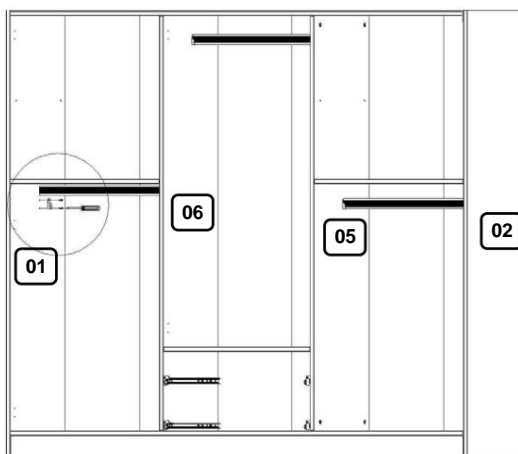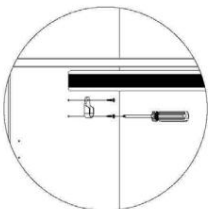


**11th**


Assemble accessory P to parts 01, 02, 05 and 06 using screw E. Place the X (hanger pipe) accessory on top of this accessory.

12


Assemble the T (shelf pin)  
accessory to parts 01, 02, 05 and  
06. Place the movable shelves  
on top of this accessory.

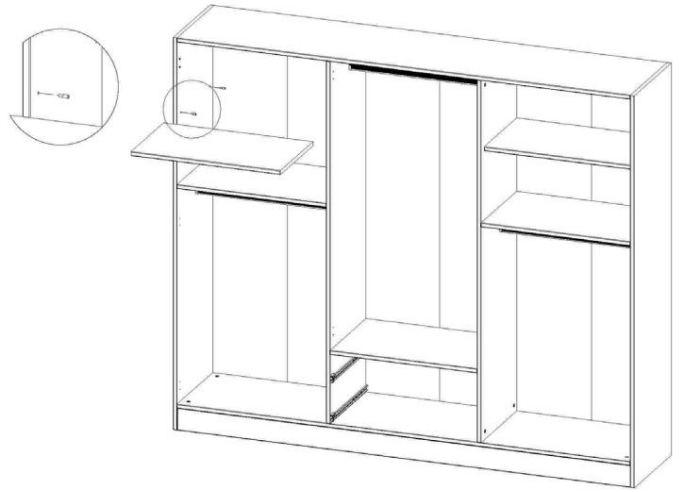

**Do not disassemble or separate the apparatus attached to the body at the end of the hinges. After mounting on the door, screw it to the holes on the cabinet. Use it as shown below.**

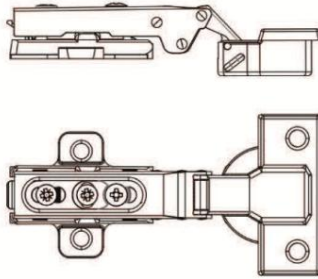


Düz Menteşe (Dış Kapak)

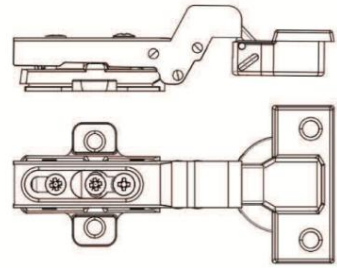

Deve Boynu Menteşe (İç Kapak)

Dolap ile birlikte gönderilen iki farklı menteşe bulunmaktadır. Düz menteşe Dışa açılan kapaklarda kullanılmalıdır. İçe açılan kapaklarda deve boynu menteşe kullanılması zorunludur. Farklı kullanıldığı durumlarda kapaklar düzgün çalışmayacaktır.

**Use Half Gooseneck hinges on the inner  
doors**

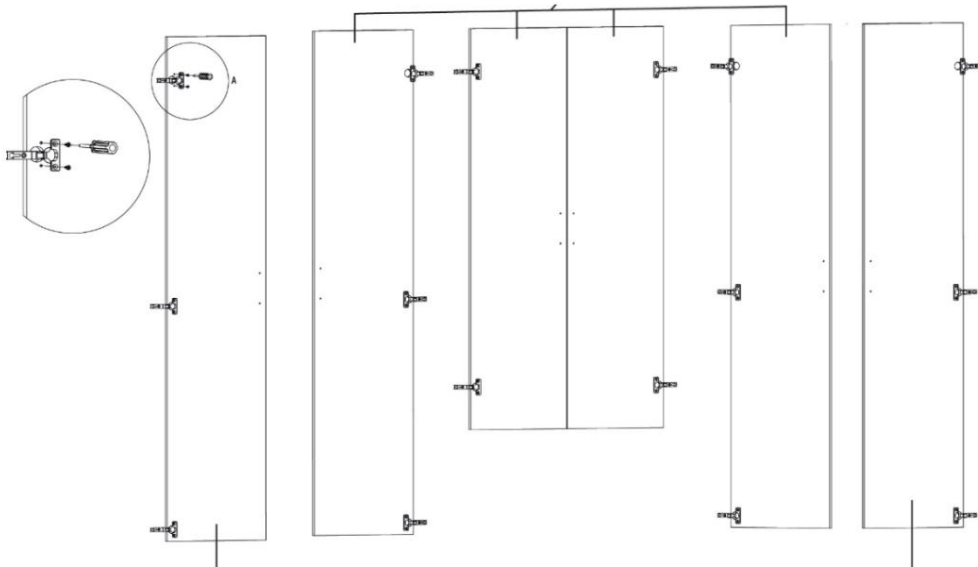


**Use flat hinges on outer covers.**

**13**

Screw the J and U parts to the covers with their ends attached.  
Turn the J (hinge) part to the open position and screw it to the marked  
places on the cabinet body.


Screw the M (handle) accessory into the holes drilled on the  
covers.

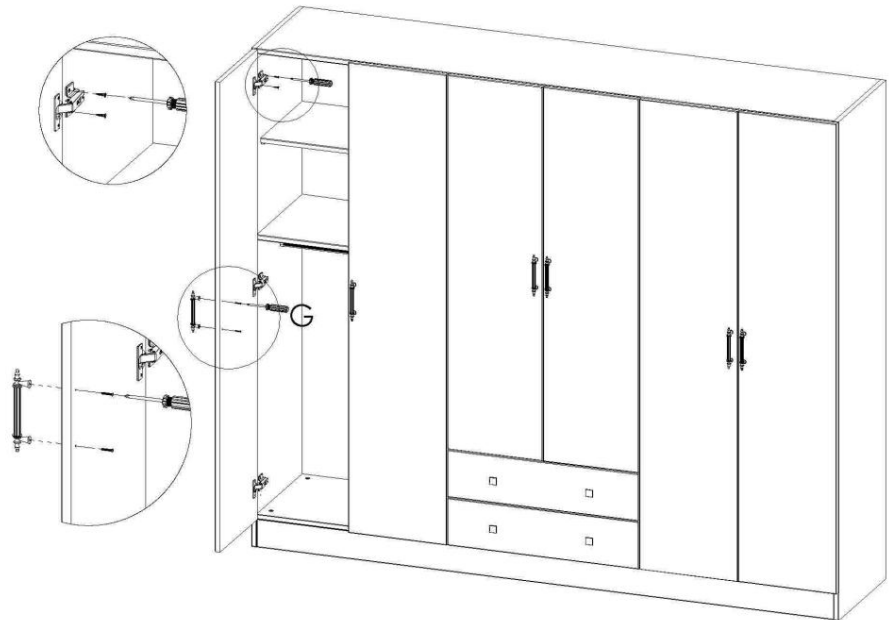




**14**


11 nolu parçayı 13 nolu parçaya A, B ve C aksesuarlarını kullanarak resimdeki gibi birleştiriniz. Birleştirme işleminden sonra 12 nolu parçayla birleştiriniz.

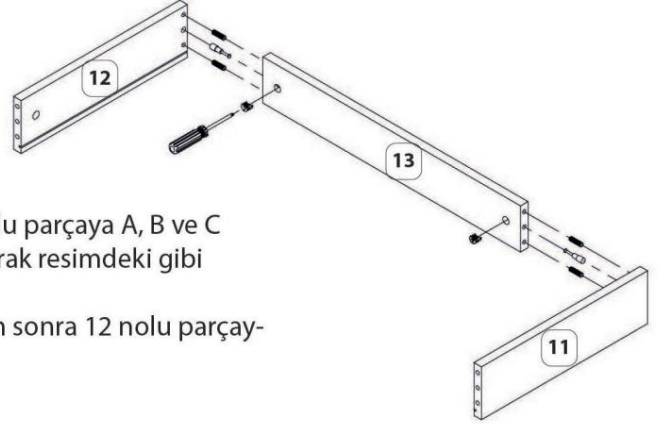**15**


Aksesuar listesinde yer alan N ve F isimli parçaları kullanarak resimdeki gibi birleştiriniz.

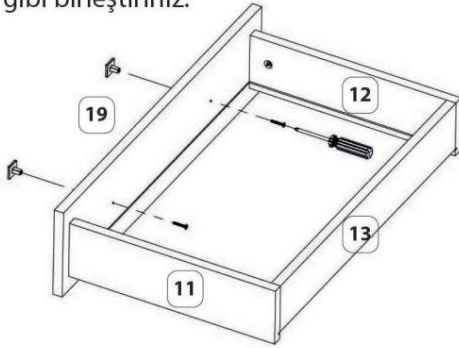**16**

Daha sonra birleştirilen bu parça ile 19 nolu parçayı A,B, ve C aksesuarlarını kullanarak birleştiriniz.

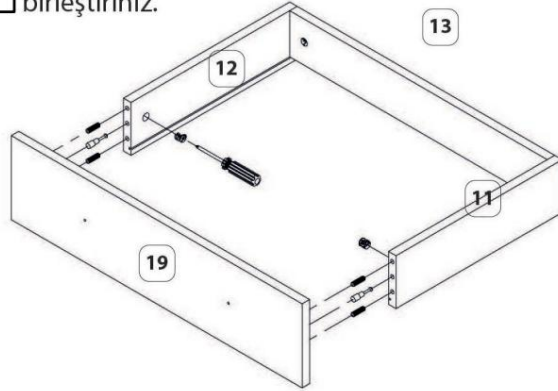**17**

11 ve 12 nolu parçaya V, E aksesuarlarını kullanarak tekirler çekmecenin arka kısmına gelecek şekilde montajlayınız.

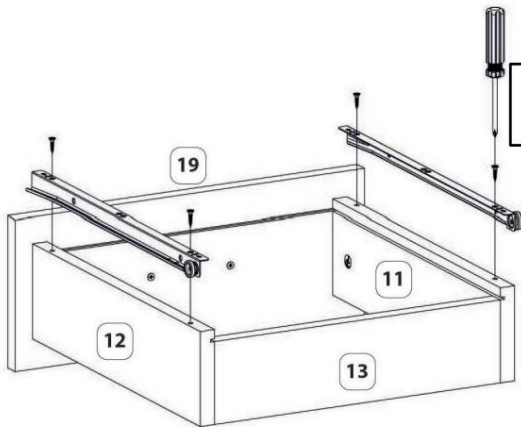**18**

Elde edilen birleştirilmiş bu parçayı resimdeki gibi 15 nolu parça ile birleştiriniz. L aksesuarı ile 13 nolu parçaya sabitleyiniz.

