

Bino Prism






Box Contents:

- | | |
|--------------------------------|----------------------|
| a) Short Screws (12x) | c) Wood Shelves (3x) |
| b) Long Screws and Dowels (1x) | d) Metal Frames (2x) |

Note:

-Use the shorter screws for attaching the wood shelf to **the metal frames** at screw plates.

-Use the longer screw for attaching the wood shelf to **the wall** at the point 1 on the image.

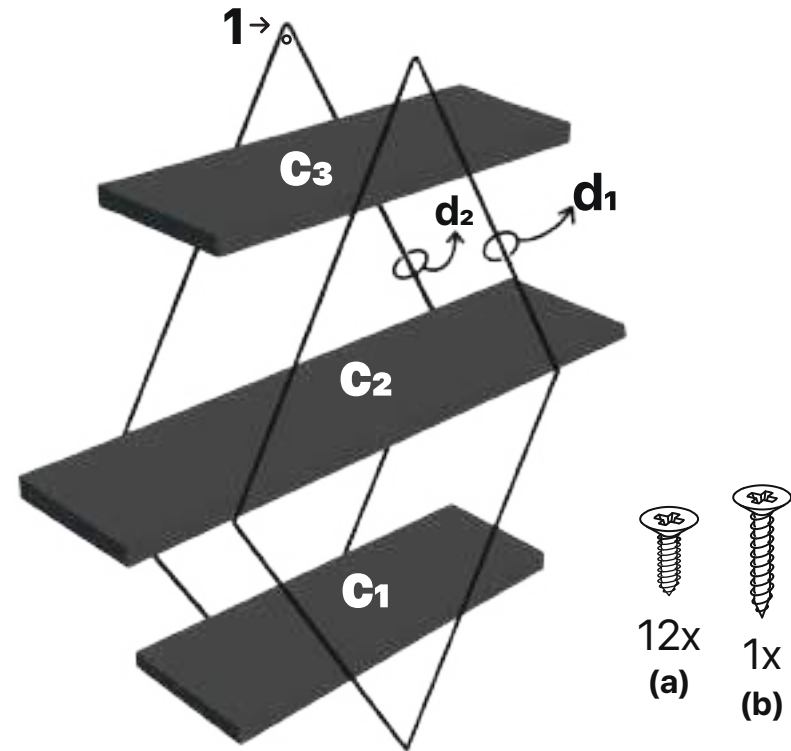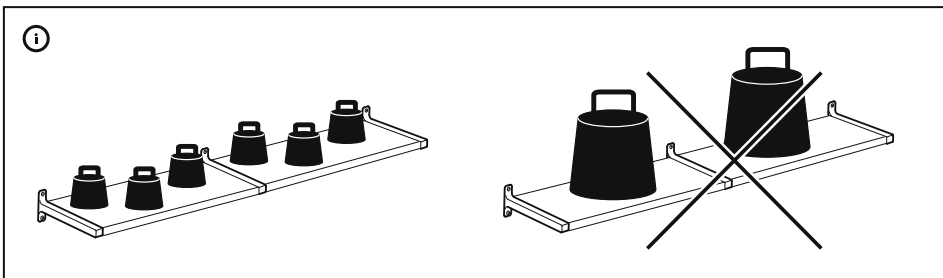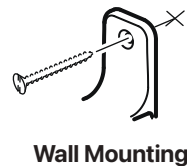

1) Make sure that the shelves are positioning during installation as shown in the figures.

2) Align the metal frames side by side, and place the shelves on the metal frames. **Screw plates must remain under the wooden shelf.**

3) During the assembly, make sure that the wood stands firmly between the 2 metal frame before screwing. Mount by reversing the the metal frames with the help of another person, start the screwing process from top to bottom.

4) Determine the place where you will mount your shelf, drill the wall and insert the dowel in the hole and mount the installed shelf on the wall with a screw from the place indicated by ①.

5) Your product is ready to use.