



TERMORA **RADIADOT CABINET**

ASSEMBLY INSTRUCTIONS




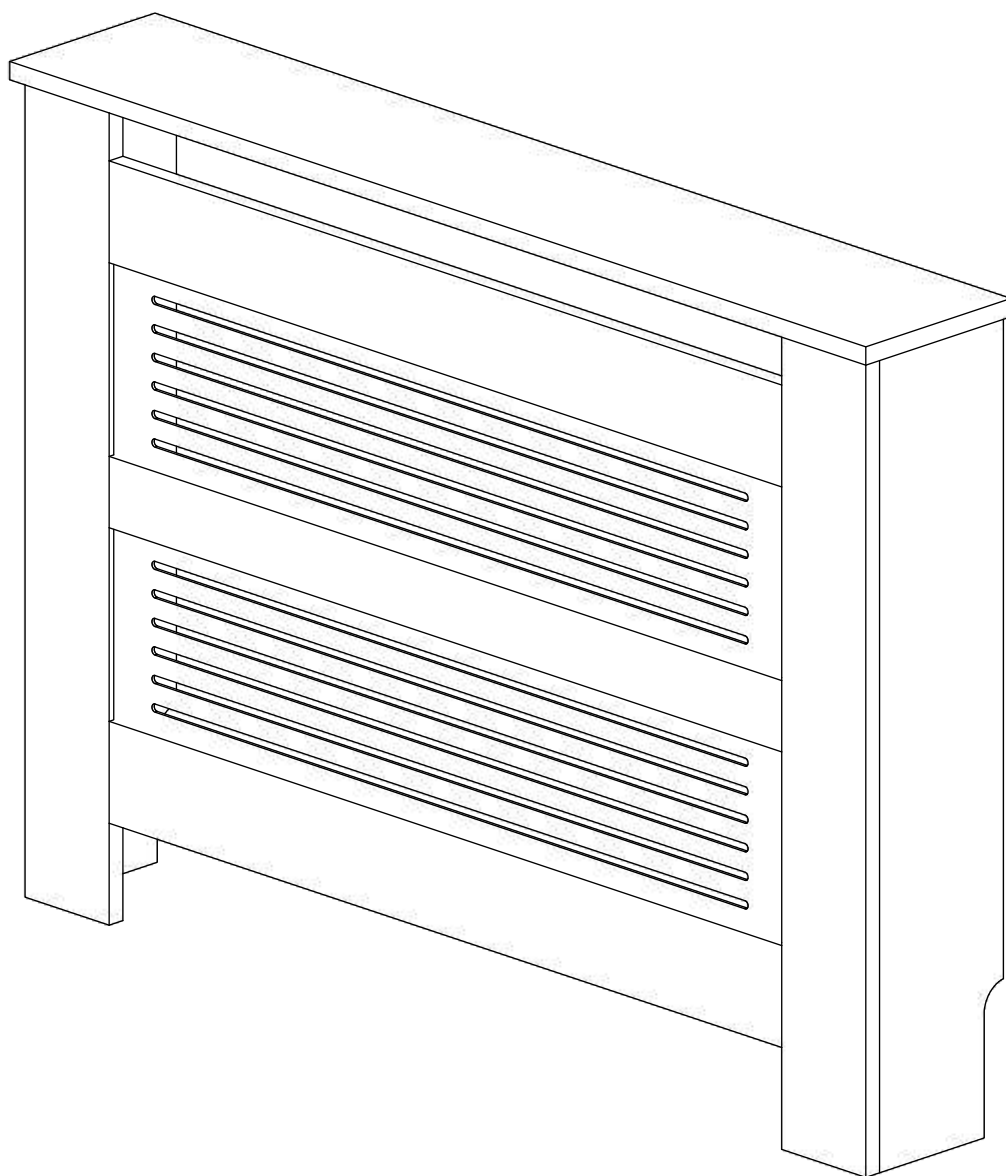


TOOLS & INSTALLATION COMPONENTS





A <u>SCREW</u>  10 PCS	B <u>HEAD</u>  22 PCS	C <u>DOWEL</u>  14 PCS	D <u>DOUBLE SCREW</u>  6 PCS
--	---	--	--

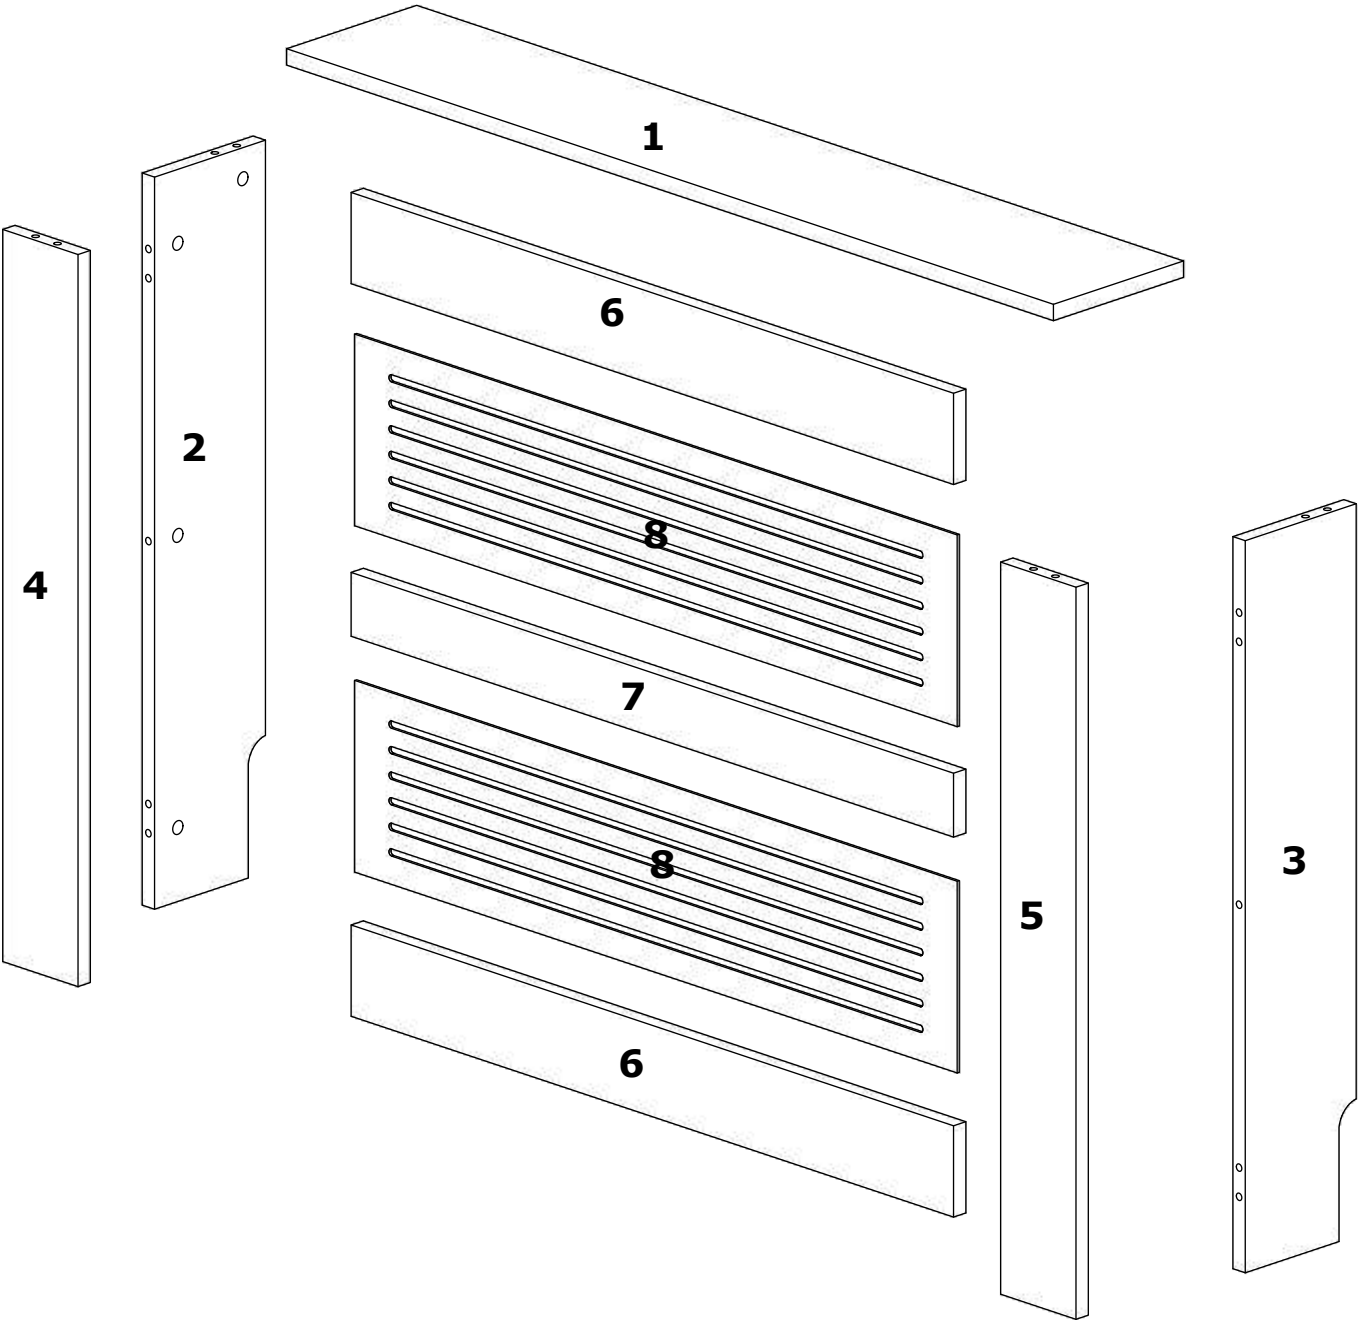





STEP 1

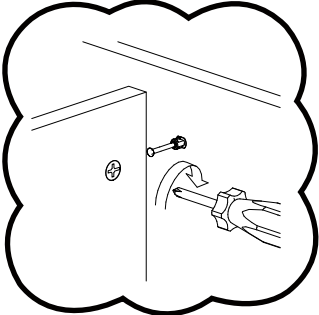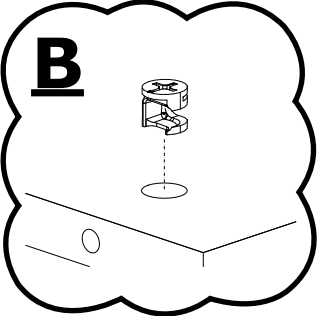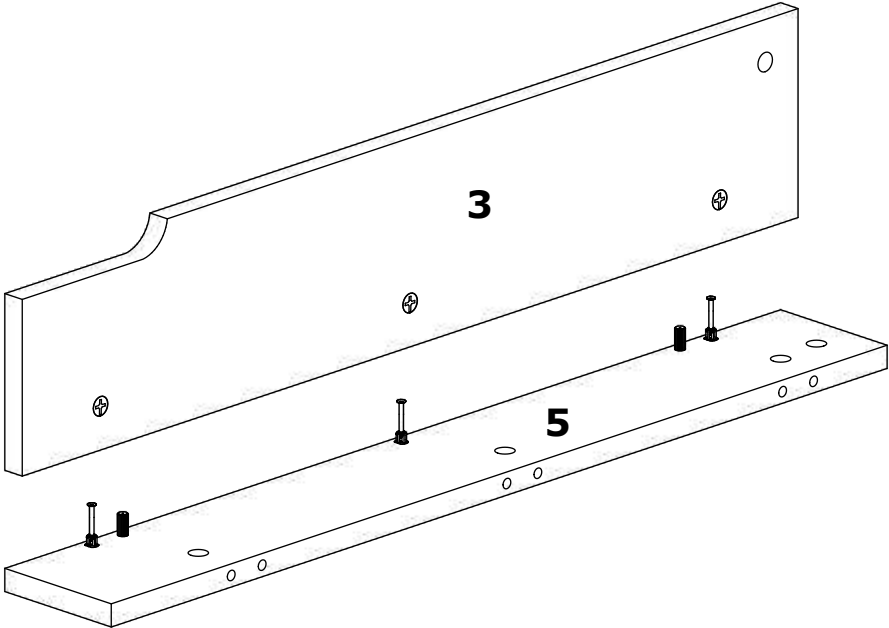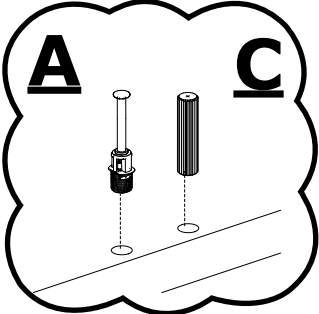


STEP 2

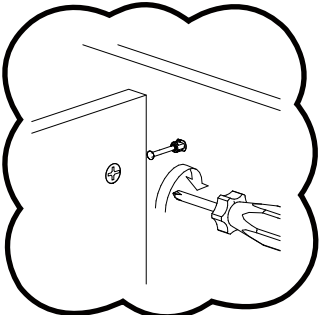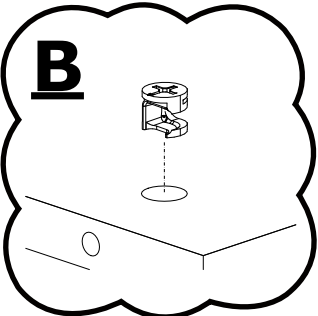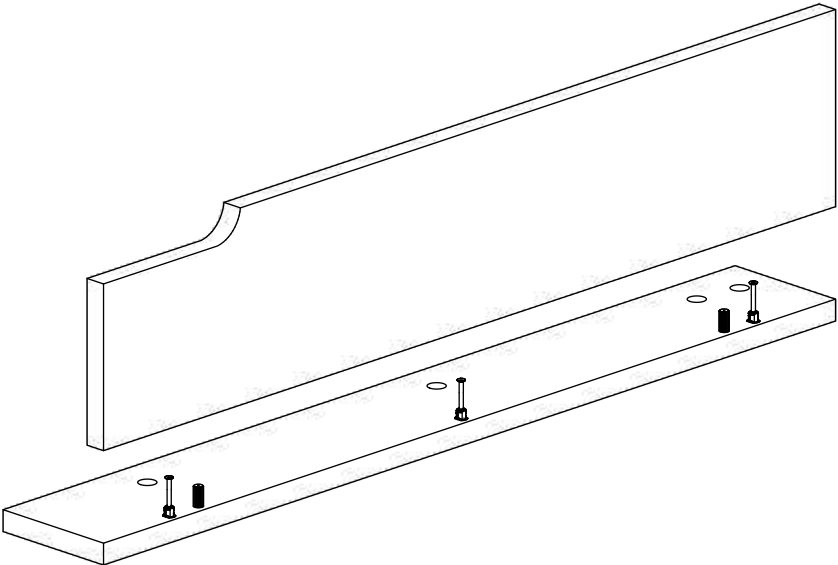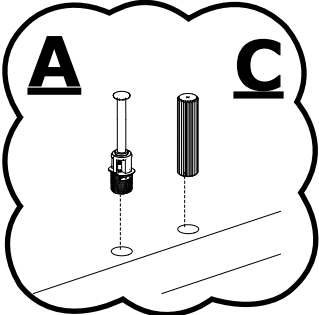





STEP 3

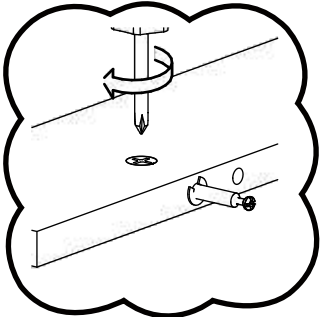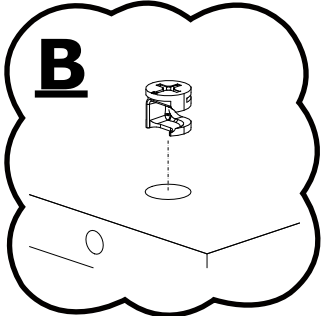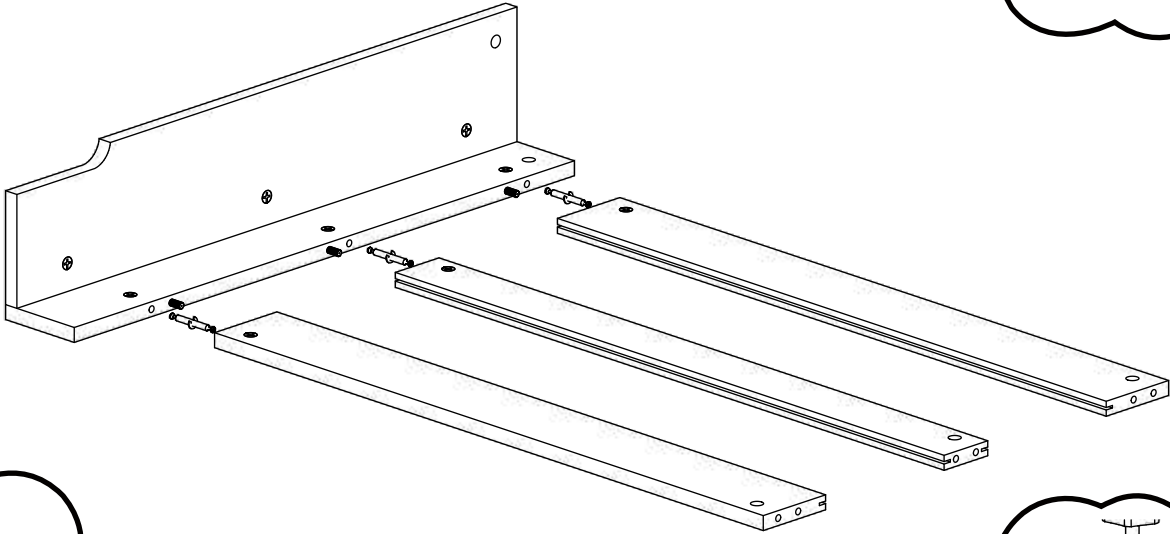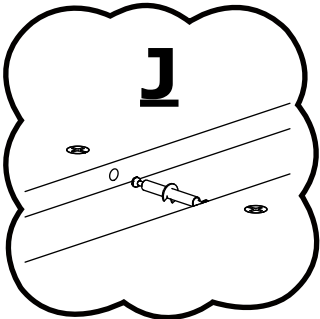

STEP 4

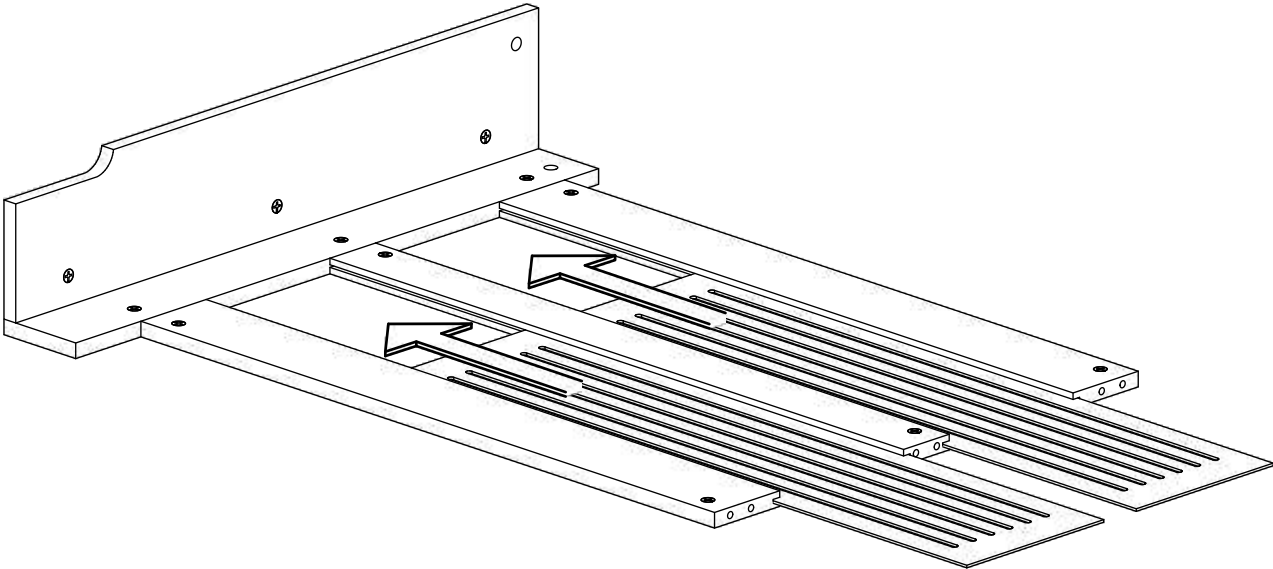

STEP 5

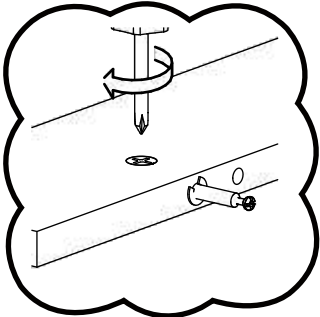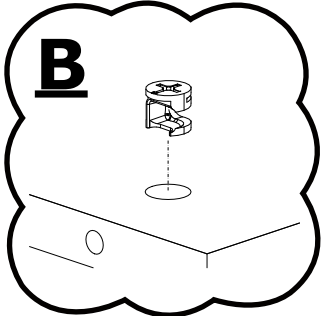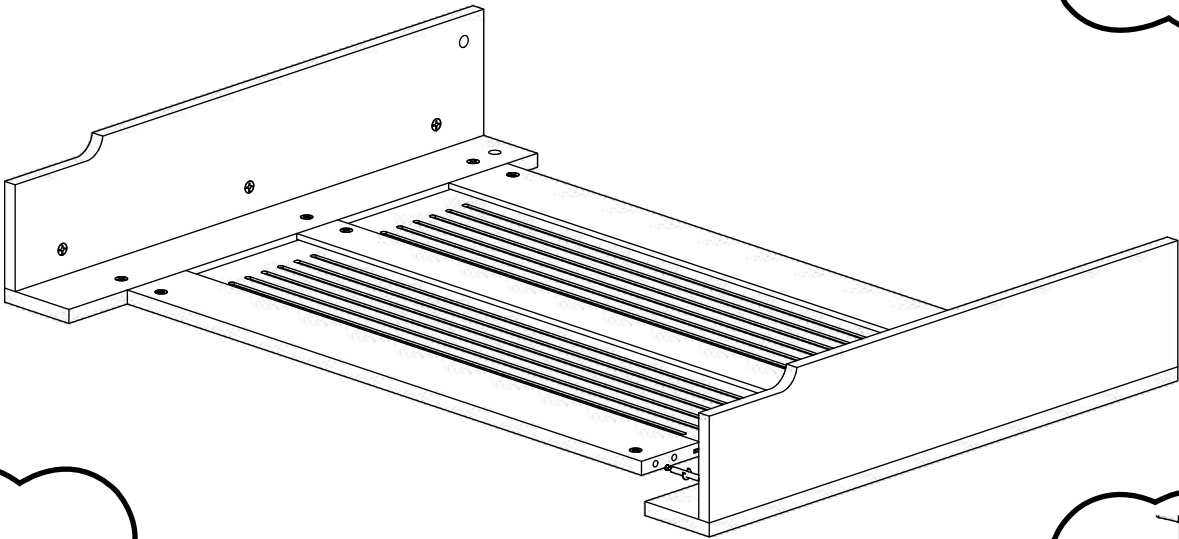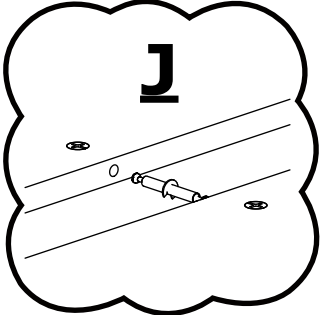

STEP 6

